

# HARDWARE REFERENCE MANUAL



## **“Clipper” Board**

**(Turbo PMAC2-Eth-Lite)**

Turbo PMAC2-Eth-Lite Hardware Reference

4xx-603871-xAxx

May 1<sup>st</sup>, 2008



**DELTA TAU**  
Data Systems, Inc.

*NEW IDEAS IN MOTION ...*

## **Copyright Information**

© 2008 Delta Tau Data Systems, Inc. All rights reserved.

This document is furnished for the customers of Delta Tau Data Systems, Inc. Other uses are unauthorized without written permission of Delta Tau Data Systems, Inc. Information contained in this manual may be updated from time-to-time due to product improvements, etc., and may not conform in every respect to former issues.

To report errors or inconsistencies, call or email:

### **Delta Tau Data Systems, Inc. Technical Support**

Phone: (818) 717-5656

Fax: (818) 998-7807

Email: [support@deltatau.com](mailto:support@deltatau.com)

Website: <http://www.deltatau.com>

## **Operating Conditions**

All Delta Tau Data Systems, Inc. motion controller products, accessories, and amplifiers contain static sensitive components that can be damaged by incorrect handling. When installing or handling Delta Tau Data Systems, Inc. products, avoid contact with highly insulated materials. Only qualified personnel should be allowed to handle this equipment.

In the case of industrial applications, we expect our products to be protected from hazardous or conductive materials and/or environments that could cause harm to the controller by damaging components or causing electrical shorts. When our products are used in an industrial environment, install them into an industrial electrical cabinet or industrial PC to protect them from excessive or corrosive moisture, abnormal ambient temperatures, and conductive materials. If Delta Tau Data Systems, Inc. products are exposed to hazardous or conductive materials and/or environments, we cannot guarantee their operation.

REVISION HISTORY				
REV.	DESCRIPTION	DATE	CHG	APPVD
1	NEW MANUAL CREATION	03/23/07	CP	S. MILICI
2	CORRECTIONS TO JUMPERS E4, E5, E6	04/25/07	CP	S. MILICI
3	UPGRADE FROM PRELIMINARY STATUS; ENET IP SETUP PP. 12-16; ADD CH5 OPT12 MOTOR P. 24	11/13/07	CP	S. MILICI
4	UPDATED CPU ANALOG INPUTS, P. 23	11/22/07	CP	S. SATTARI
5	UPDATES FOR VERSION –103 AND –104	05/06/08	CP	S. MILICI



## Table of Contents

<b>INTRODUCTION .....</b>	<b>1</b>
Board Configuration.....	1
<i>Base Version</i> .....	1
Board Options .....	2
<i>Option 5xx: CPU Speed Options</i> .....	2
<i>Option 10: Firmware Version Specification</i> .....	2
<i>Option 12: Analog-to-Digital Converters</i> .....	2
Additional Accessories.....	2
<i>Acc-IP: Axis Expansion Piggyback Board</i> .....	2
<i>Acc-8TS Connections Board</i> .....	2
<i>Acc-8ES Four-Channel Dual-DAC Analog Stack Board</i> .....	3
<i>Acc-8FS Four-Channel Direct PWM Stack Breakout Board</i> .....	3
<i>Acc-51S Four-Channel High Resolution Interpolator Board</i> .....	3
<b>HARDWARE SETUP .....</b>	<b>5</b>
Configuration Jumpers .....	5
<b>MACHINE CONNECTIONS.....</b>	<b>6</b>
Mounting.....	6
Power Supplies.....	6
<i>Digital Power Supply</i> .....	6
<i>DAC Outputs Power Supply</i> .....	6
<i>Flags Power Supply</i> .....	6
Overtravel Limits and Home Switches.....	6
<i>Types of Overtravel Limits</i> .....	6
<i>Home Switches</i> .....	7
Motor Signals Connections .....	7
<i>Incremental Encoder Connection</i> .....	7
<i>DAC Output Signals</i> .....	7
<i>Pulse and Direction (Stepper) Drivers</i> .....	8
<i>Amplifier Enable Signal (AENAn/DIRn)</i> .....	8
<i>Amplifier Fault Signal (FAULT-)</i> .....	8
Optional Analog Inputs .....	8
Compare Equal Outputs .....	9
Serial Port (JRS232 Port) .....	9
Machine Connections Example: Using Analog $\pm 10V$ Amplifier .....	10
Machine Connections Example: Using Pulse and Direction Drivers .....	11
<b>SOFTWARE SETUP .....</b>	<b>12</b>
PMAC I-Variables.....	12
Communications.....	12
<i>Configuring IP address through the Ethernet port using PeWin32 Pro2</i> .....	12
<i>Configuring the IP address with the "EthUSBConfigure.exe" application.</i> .....	13
<i>Configuring USB</i> .....	15
<i>Using PeWin32 Pro and later to establish communication</i> .....	16
Operational Frequency and Baud Rate Setup.....	19
Filtered DAC Output Configuration.....	20
<i>Parameters to Set up Global Hardware Signals</i> .....	20
<i>Parameters to Set Up Per-Channel Hardware Signals</i> .....	21
<i>Effects of Changing I7000 on the System</i> .....	21
<i>How changing I7000 affects other settings in PMAC</i> .....	23
<i>Effects of Output Resolution and Servo Interrupt Frequency on Servo Gains</i> .....	24
Using Flag I/O as General-Purpose I/O.....	25
Analog Inputs Setup.....	25
<i>CPU Analog Inputs</i> .....	25

General-Purpose Digital Inputs and Outputs.....	25
Thumbwheel Port Digital Inputs and Outputs.....	26
Setup of a fifth motor using opt-12 on the Clipper board.....	26
<b>HARDWARE REFERENCE SUMMARY .....</b>	<b>28</b>
Board Dimensions and Layout.....	29
Connectors and Indicators.....	31
<i>J2 - Serial Port (JRS232 Port).....</i>	<i>31</i>
<i>J3 - Machine Connector (JMACH1 Port).....</i>	<i>31</i>
<i>J4 - Machine Connector (JMACH2 Port).....</i>	<i>31</i>
<i>J7 - Machine Connector (JMACH3 Port).....</i>	<i>31</i>
<i>J8 - Thumbwheel Multiplexer Port (JTHW Port) .....</i>	<i>31</i>
<i>J9 - General-Purpose Digital Inputs and Outputs (JOPT Port).....</i>	<i>31</i>
<i>J10 - Handwheel and Pulse/Dir Connector (JHW/PD Port) .....</i>	<i>32</i>
<i>J12 - Ethernet Communications Port.....</i>	<i>32</i>
<i>J13 - USB Communications Port.....</i>	<i>32</i>
<i>JP11 - OPT-11 Shunt.....</i>	<i>32</i>
<i>TB1 - Power Supply Terminal Block (JPWR Connector) .....</i>	<i>32</i>
<i>LED Indicators .....</i>	<i>32</i>
<b>E-POINT JUMPER DESCRIPTIONS .....</b>	<b>34</b>
E0: Forced Reset Control .....	34
E1 - E2: Serial Port Selection (rev 102 and below only).....	34
E3: Normal/Re-Initializing Power-Up/Reset.....	34
E4: Watchdog Disable Jumper .....	34
E5: Ethernet Port CPU Write Control Jumper.....	35
E6: ADC Inputs Enable.....	35
E7 - E8: Power-Up State Jumpers .....	35
E10 - E12: Power-Up State Jumpers .....	35
E13: Power-Up/Reset Load Source.....	36
E14- E17: Ports Direction Control .....	36
<b>CONNECTOR PINOUTS.....</b>	<b>37</b>
J2 (JRS232) Serial Port Connector.....	37
J3 (JMACH1): Machine Port Connector .....	38
J3 JMACH1 (50-Pin Header).....	39
J4 (JMACH2): Machine Port CPU Connector .....	40
J7 (JMACH3): Machine Port .....	41
J8 (JTHW): Multiplexer Port Connector.....	42
J9 (JOPT): I/O Port Connector.....	43
J10 (JHW) Handwheel Encoder Connector.....	44
J12 Ethernet Port (Optional).....	45
TB1 (JPWR): Power Supply .....	45
<b>SCHEMATICS .....</b>	<b>47</b>

## INTRODUCTION

---



The Turbo PMAC2-Eth-Lite controller (“Clipper”) from Delta Tau provides a very powerful, but compact and cost-effective, multi-axis controller for cost-sensitive applications. It has a full Turbo PMAC2 CPU section and provides a minimum of 4 axes of servo or stepper control with 32 general-purpose digital I/O points. It provides both Ethernet and RS-232 communications links.

The optional axis expansion board provides a set of four additional servo channels and extra I/O ports.

## Board Configuration

---

### Base Version

- The base version of the Clipper Controller (Turbo PMAC2-Eth-Lite) provides a 110mm x 220mm (4.25” x 8.5”) board with:
  - 80 MHz DSP56303 Turbo PMAC CPU
  - 256k x 24 user SRAM
  - 1M x 8 flash memory for user backup & firmware
  - Latest released firmware version
  - RS-232 serial interface
  - 100 Mbps Ethernet interface
  - 480 Mbit/sec USB 2.0 interface
  - 4 channels axis-interface circuitry, each including:
    - 12-bit +10V analog output
    - Pulse-&-direction digital outputs
    - 3-channel differential/single-ended encoder input
    - 5 input flags, 2 output flags
    - UVW TTL-level “hall” inputs
  - 50-pin IDC header for amplifier/encoder interface
  - 34-pin IDC header for flag interface
  - 4-pin Molex connector for power supply input (5V, +/-12V, GND)
  - (+/-12V only required for analog outputs or inputs)
  - PID/notch/feedforward servo algorithms
  - 32 general-purpose TTL-level I/O points, direction selectable by byte:
    - 16-point multiplexer port compatible with Delta Tau I/O accessories
    - 16-point “Opto” port compatible with Opto-22-style modules
  - “Handwheel” port with 2 each:
    - Quadrature encoder inputs
    - Pulse (PFM or PWM) output pairs

On-board options:

- Optional 2 channels 12-bit A/D converters, 1 12-bit D/A converter
- Optional Modbus Ethernet I/O protocol
- On-board 8K x 16 dual-ported RAM.

Stackable accessories supported:

- ACC-1P PC/104-format Channel 5-8 board
- ACC-8ES 4-channel dual 18-bit true-DAC output board
- ACC-8FS 4-channel direct-PWM output board

- ACC-8TS 4-channel ADC-interface board
- ACC-51S 2/4-channel high-resolution encoder interpolator board

## **Board Options**

---

### **Option 5xx: CPU Speed Options**

- OPT-5C3 80MHz DSP56303 CPU, expanded program and user data memory
- OPT-5F3 240MHz DSP56321 CPU, expanded program memory and user data memory

### **Option 10: Firmware Version Specification**

Normally the Turbo PMAC2-Eth-Lite Controller is provided with the newest released firmware version. A label on the memory IC shows the firmware version loaded at the factory. Option 10 provides for a user-specified firmware version.

### **Option 12: Analog-to-Digital Converters**

Option 12 permits the installation of two channels of on-board analog-to-digital converters with  $\pm 10V$  input range and 12-bits resolution. This option also provides one filtered PWM DAC output.

## **Additional Accessories**

---

### **Acc-1P: Axis Expansion Piggyback Board**

Acc-1P provides four additional channels axis interface circuitry for a total of eight servo channels, each including:

- 12-bit  $\pm 10V$  analog output
- Pulse-and-direction digital outputs
- 3-channel differential/single-ended encoder input
- Four input flags, two output flags
- Three PWM top-and-bottom pairs (unbuffered)

### **Acc-1P Option 1: I/O Ports**

Option 1 provides the following ports on the Acc-1P axes expansion board for digital I/O connections.

- Multiplexer Port: This connector provides eight input lines and eight output lines at TTL levels. When using the PMAC Acc-34x type boards these lines allow multiplexing large numbers of inputs and outputs on the port. Up to 32 of the multiplexed I/O boards may be daisy-chained on the port, in any combination.
- I/O Port: This port provides eight general-purpose digital inputs and eight general-purpose digital outputs at 5 to 24Vdc levels. This 34-pin connector was designed for easy interface to OPTO-22 or equivalent optically isolated I/O modules when different voltage levels or opto-isolation to the PMAC2A PC/104 is necessary.
- Handwheel port: this port provides two extra channels, each jumper selectable between encoder input or pulse output.

### **Acc-1P Option 2: Analog-to-Digital Converters**

Option 2 permits the installation on the Acc-1P of two channels of analog-to-digital converters with  $\pm 10V$  input range and 12-bits resolution.

### **Acc-8TS Connections Board**

Acc-8TS is a stack interface board to for the connection of either one or two Acc-28B A/D converter boards. When a digital amplifier with current feedback is used, the analog inputs provided by the Acc-28B cannot be used.



### **Acc-8ES Four-Channel Dual-DAC Analog Stack Board**

Acc-8ES provides four channels of 18-bit dual-DAC with four DB-9 connectors. This accessory is stacked to the Clipper Board and it is mostly used with amplifiers that require two  $\pm 10$  V command signals for sinusoidal commutation.

### **Acc-8FS Four-Channel Direct PWM Stack Breakout Board**

Acc-8FS is a 4-channel direct PWM stack breakout board for the Clipper Board. This is used for controlling digital amplifiers that require direct PWM control signals. When a digital amplifier with current feedback is used, the analog inputs provided by the Option 12 of the Clipper Board (the Option 2 of the Acc-1P or the Acc-28B) cannot be used.

### **Acc-51S Four-Channel High Resolution Interpolator Board**

The Acc-51S Interpolator Accessory is a sine wave input interpolator designed to interface analog quadrature encoders to the Clipper Board. The Acc-51S stacks on top of the Clipper Board or on top of the Acc-1P 5-8 axis board. The Interpolator accepts inputs from two (optionally four) sinusoidal or quasi-sinusoidal encoders and provides encoder position data to the PMAC. This interpolator creates 4,096 steps per sine-wave cycle.



## HARDWARE SETUP

On the Clipper Board, there are a number of jumpers called E-points or W-points that customize the hardware features of the CPU for a given application and must be setup appropriately. The following is an overview grouped in appropriate categories. For an itemized description of the jumper setup configuration, refer to the E-Point Descriptions section.

### Configuration Jumpers

**E0: Forced Reset Control Jumper** – Remove E0 for normal operation. Installing E0 forces PMAC to a reset state. This configuration is for factory use only; the board will not operate with E0 installed.

**E1 and E2: Serial Port Selection Jumper** – These jumpers select the target CPU for the serial port as either the main PMAC CPU or the Ethernet CPU (change IP address). Both jumpers must be set the same.

- 1-2 for Main CPU
- 2-3 for Ethernet CPU

**E3: Re-Initialization on Reset Control Jumper** – If E3 is OFF (default), PMAC executes a normal reset, loading active memory from the last saved configuration in non-volatile flash memory. If E3 is ON, PMAC re-initializes on reset, loading active memory with the factory default values.

**E4: Watchdog Timer Disable Jumper** – Jumper E4 must be OFF for the watchdog timer to operate. This is a very important safety feature, so it is vital that this jumper be OFF for normal operation. E4 should only be put ON to debug problems with the watchdog timer circuit.

**E5: Ethernet Port CPU Write Control Jumper** – Jump pins 1 to 2 to write protect Ethernet CPU Jump pin 2 to 3 to enable programming of the Ethernet CPU..

**E6: ADC Enable Jumper** – Install E16 to enable the analog-to-digital converter circuitry ordered through Option-12. Remove this jumper to disable this option, which might be necessary to control motor 1 through a digital amplifier with current feedback.

**E10-E12: Power-Up State Jumpers** – Jumper E10 must be OFF, jumper E11 must be ON, and jumper E12 must be ON, in order for the CPU to copy the firmware from flash memory into active RAM on power-up/reset. This is necessary for normal operation of the card. (Other settings are for factory use only.)

**E13: Firmware Load Jumper** – If jumper E13 is ON during power-up/reset, the board comes up in bootstrap mode which permits loading of firmware into the flash-memory IC. When the PMAC Executive program tries to establish communications with a board in this mode, it will detect automatically that the board is in bootstrap mode and ask what file to download as the new firmware. Jumper E13 must be OFF during power-up/reset for the board to come up in normal operational mode.

**E14-E17: Ports Direction Control Jumpers** – These jumpers select the I/O lines direction of the JTHW and the JOPT connectors. This allows configuring these ports as all inputs, all outputs or half inputs and half outputs according to the following tables:

JTHW Connector			
E14	E15	DATx lines	SELx lines
OFF	OFF	Output	Output
OFF	ON	Output	Input
ON	OFF	Input	Output
ON	ON	Input	Input

JOPT Connector			
E16	E17	MOx lines	MIx Lines
OFF	OFF	Output	Output
OFF	ON	Output	Input
ON	OFF	Input	Output
ON	ON	Input	Input

If E14 is removed or E15 is installed then the multiplexing feature if the JTHW port cannot be used.

## MACHINE CONNECTIONS

---

Typically, the user connections are made to terminal blocks that attach to the JMACH connectors by a flat cable. The following are the terminal blocks recommended for connections:

- 34-Pin IDC header to terminal block breakouts (Phoenix part number 2281063) Delta Tau part number 100-FLKM34-000
- 50-Pin IDC header to terminal block breakouts (Phoenix part number 2281089) Delta Tau part number 100-FLKM50-000

### Mounting

---

The Clipper Board is typically installed as a stand-alone controller using standoffs. At each of the four corners of the board and at the center edges, there are mounting holes that can be used for this.

The order of the Acc-1P or other stacked accessories with respect to the Clipper Board does not matter.

### Power Supplies

---

#### Digital Power Supply

3A @ +5V ( $\pm 5\%$ ) (15 W) with a minimum 5 msec rise time

(Eight-channel configuration, with a typical load of encoders)

The Clipper Board and other stackable accessories each require a 1A @ 5VDC power supply for operation. Therefore, a 3A @ 5VDC power supply is recommended for a Clipper Board with two stacked accessories. The +5V lines from the supply, including the ground reference, can be brought in either from the TB1 terminal block or from the JMACH1 connector.

#### DAC Outputs Power Supply

0.3A @ +12 to +15V (4.5W)

0.25A @ -12 to -15V (3.8W)

(Eight-channel configuration)

The  $\pm 12$ V lines from the supply, including the ground reference, can be brought in either from the TB1 terminal block or from the JMACH1 connector.

#### Flags Power Supply

Each channel of PMAC has five dedicated digital inputs on the machine connector: PLIMn, MLIMn (overtravel limits), HOMEn (home flag), FAULTn (amplifier fault), and USERn. A power supply from 5 to 24V must be used to power the circuits related to these inputs. This power supply can be the same used to power PMAC and can be connected from the TB1 terminal block or the JMACH1 connector.


### Overtravel Limits and Home Switches

---

When assigned for the dedicated uses, these signals provide important safety and accuracy functions. PLIMn and MLIMn are direction-sensitive over-travel limits that must conduct current to permit motion in that direction. If no over-travel switches will be connected to a particular motor, this feature must be disabled in the software setup through the PMAC Ixx24 variable.

#### Types of Overtravel Limits

PMAC expects a closed-to-ground connection for the limits to not be considered on fault. This arrangement provides a failsafe condition. Usually, a passive normally close switch is used. If a proximity switch is needed instead, use a 5 to 24V normally closed to ground NPN sinking type sensor.

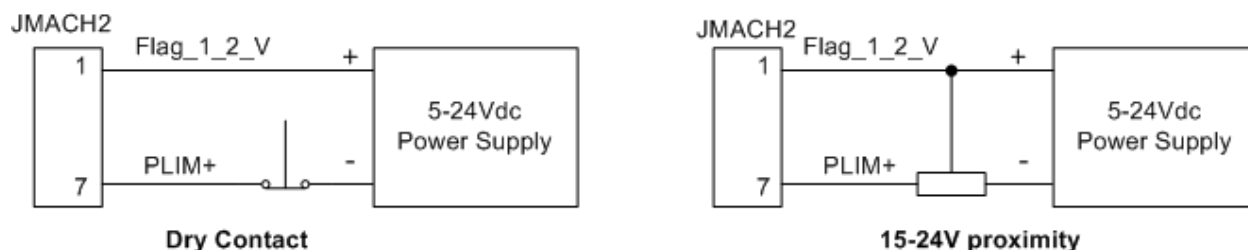

## Home Switches


While normally closed-to-ground switches are required for the overtravel limits inputs, the home switches could be either normally close or normally open types. The polarity is determined by the home sequence setup, through the I-variables I9n2.

## Motor Signals Connections

### Incremental Encoder Connection

Each JMACH1 connector provides two +5V outputs and two logic grounds for powering encoders and other devices. The +5V outputs are on pins 1 and 2; the grounds are on pins 3 and 4. The encoder signal pins are grouped by number: all those numbered 1 (CHA1+, CHA1-, CHB1+, CHC1+, etc.) belong to encoder #1. The encoder number does not have to match the motor number, but usually does. Connect the A and B (quadrature) encoder channels to the appropriate terminal block pins. For encoder 1, the CHA1+ is pin 5 and CHB1+ is pin 9. If there is a single-ended signal, leave the complementary signal pins floating – do not ground them. However, if single-ended encoders are used, check the setting of the resistor packs (see the Hardware Setup section for details). For a differential encoder, connect the complementary signal lines – CHA1- is pin 7, and CHB1- is pin 11. The third channel (index pulse) is optional; for encoder 1, CHC1+ is pin 13, and CHC1- is pin 15.

**Example:** differential quadrature encoder connected to channel #1:

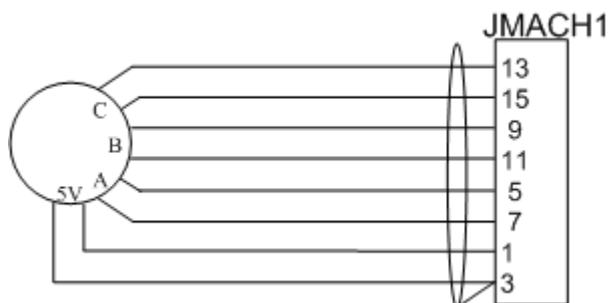

### DAC Output Signals


If PMAC is not performing the commutation for the motor, only one analog output channel is required to command the motor. This output channel can be either single-ended or differential, depending on what the amplifier is expecting. For a single-ended command using PMAC channel 1, connect DAC1+ (pin 29) to the command input on the amplifier. Connect the amplifier's command signal return line to PMAC's GND line (pin 48). In this setup, leave the DAC1- pin floating; do not ground it.

For a differential command using PMAC channel 1, connect DAC1 (pin 29) to the plus-command input on the amplifier. Connect DAC1- (pin 31) to the minus-command input on the amplifier. PMAC's GND should still be connected to the amplifier common.

Any analog output not used for dedicated servo purposes may be utilized as a general-purpose analog output by defining an M-variable to the command register, then writing values to the M-variable. The analog outputs are intended to drive high-impedance inputs with no significant current draw (10mA


max). The 220 $\Omega$  output resistors will keep the current draw lower than 50 mA in all cases and prevent damage to the output circuitry, but any current draw above 10 mA can result in noticeable signal distortion.

**Example:**

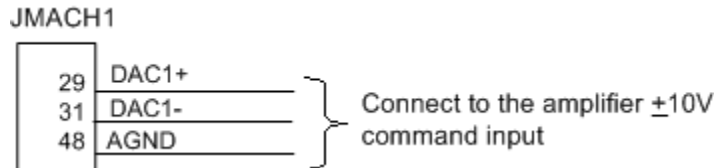


## Pulse and Direction (Stepper) Drivers

The channels provided by the Clipper Board or the Acc-1P board can output pulse and direction signals for controlling stepper drivers or hybrid amplifiers. These signals are at TTL levels.

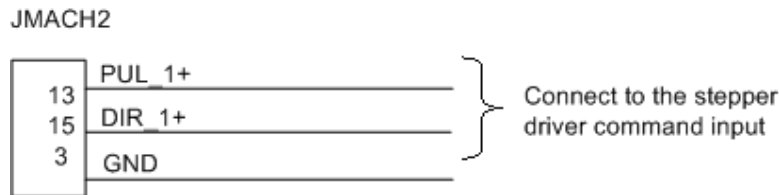


## Amplifier Enable Signal (AENAn/DIRn)

Most amplifiers have an enable/disable input that permits complete shutdown of the amplifier regardless of the voltage of the command signal. PMAC's AENA line is meant for this purpose. AENA1- is pin 33. This signal is an open-collector output and an external 3.3 k $\Omega$  pull-up resistor can be used if necessary.

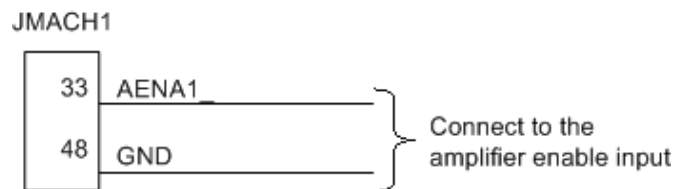


## Amplifier Fault Signal (FAULT-)

This input can take a signal from the amplifier so PMAC knows when the amplifier is having problems, and can shut down action. The polarity is programmable with I-variable Ixx24 (I124 for motor 1) and the return signal is ground (GND). FAULT1- is pin 35. With the default setup, this signal must actively be pulled low for a fault condition. In this setup, if nothing is wired into this input, PMAC will consider the motor not to be in a fault condition.

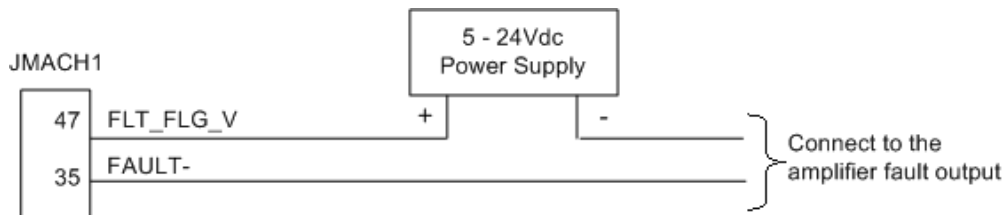


## Optional Analog Inputs

The optional analog-to-digital converter inputs are ordered either through Option-12 on the CPU or Option-2 on the axis expansion board. Each option provides two 12-bit analog inputs analog inputs with a  $\pm 10$ Vdc range, and one 12-bit filtered PWM DAC output.

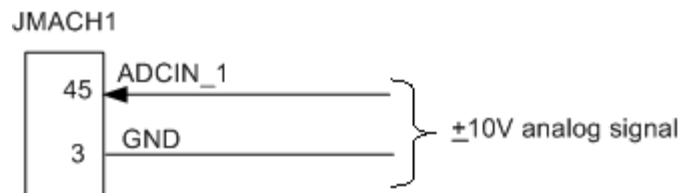

## Compare Equal Outputs


The compare-equals (EQU) outputs have a dedicated use of providing a signal edge when an encoder position reaches a pre-loaded value. This is very useful for scanning and measurement applications. Instructions for use of these outputs are covered in detail in the PMAC2 User Manual.

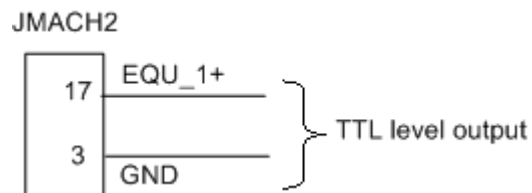

## Serial Port (JRS232 Port)


For serial communications, use a serial cable to connect your PC's COM port to the J2 serial port connector present on the Clipper Board. Delta Tau provides the Acc-3L cable for this purpose that connects the PMAC to a DB-9 connector. Standard DB-9-to-DB-25 or DB-25-to-DB-9 adapters may be needed for your particular setup.

## Machine Connections Example: Using Analog $\pm 10V$ Amplifier

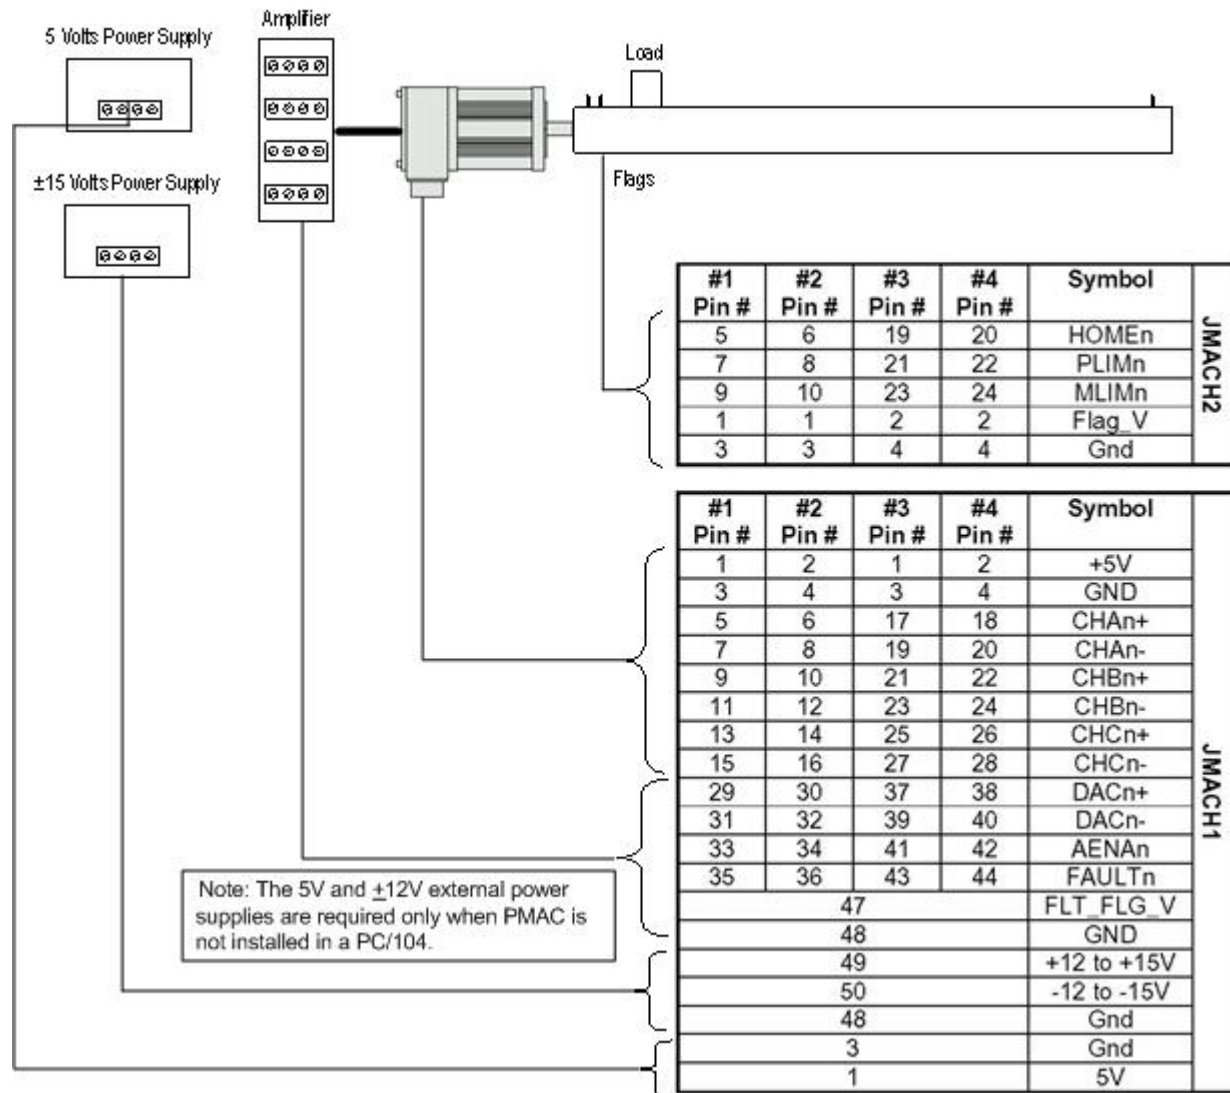



## Machine Connections Example: Using Pulse and Direction Drivers

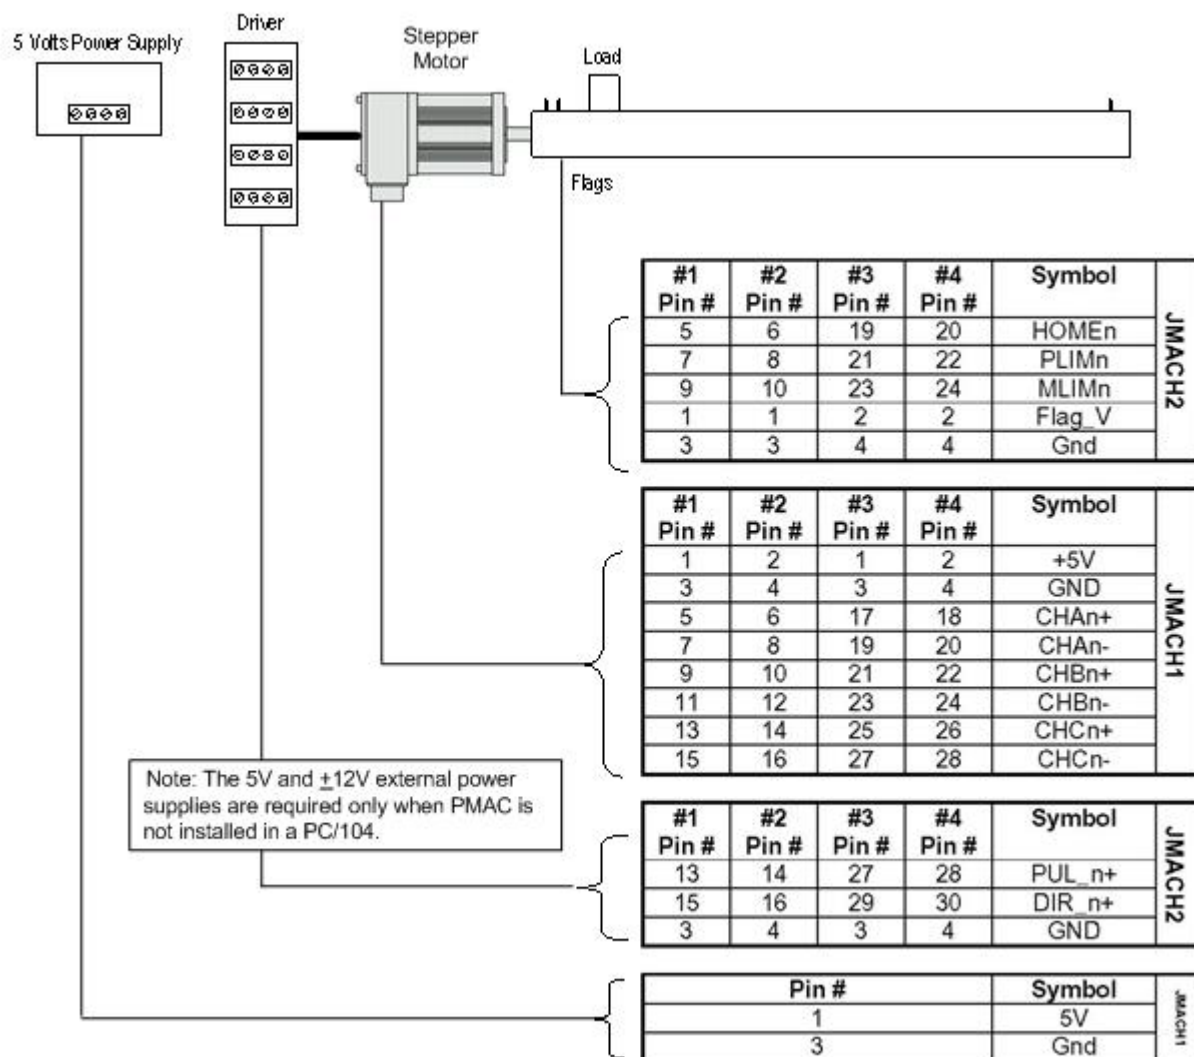

## SOFTWARE SETUP

### PMAC I-Variables

PMAC has a large set of Initialization parameters (I-variables) that determine the "personality" of the card for a specific application. Many of these are used to configure a motor properly. Once set up, these variables may be stored in non-volatile EAROM memory (using the **SAVE** command) so the card is always configured properly (PMAC loads the EAROM I-variable values into RAM on power-up).


The programming features and configuration variables for the Clipper Board are described fully in the Turbo PMAC User and Software manuals.

### Communications


Delta Tau provides software tools that allow communication with the Clipper Board via its standard RS-232 port, USB or Ethernet ports. The PEWIN32 Pro2 Executive is the most important in the series of software accessories, and it allows configuring and programming the PMAC for any particular application.

### Configuring IP address through the Ethernet port using PeWin32 Pro2


In the PMAC Devices window select the PMAC Ethernet device that you wish to change (as in PMAC 03 below) and click on the "Properties..." button:

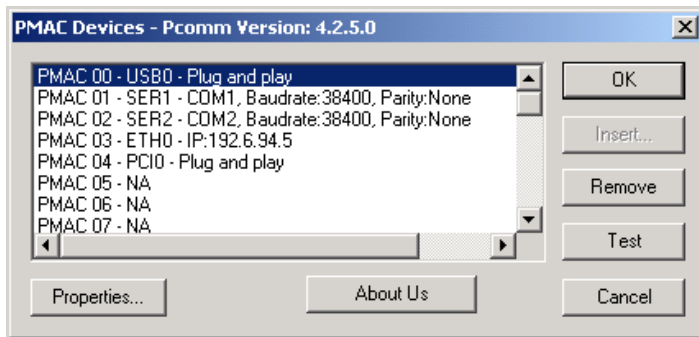

Click the **General** button in the **Device Properties** window:

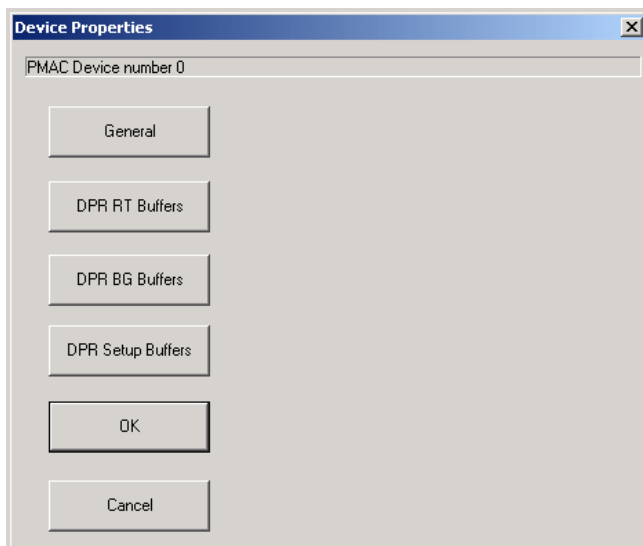


When this window appears, click the **Change IP Address** button and set the new address:

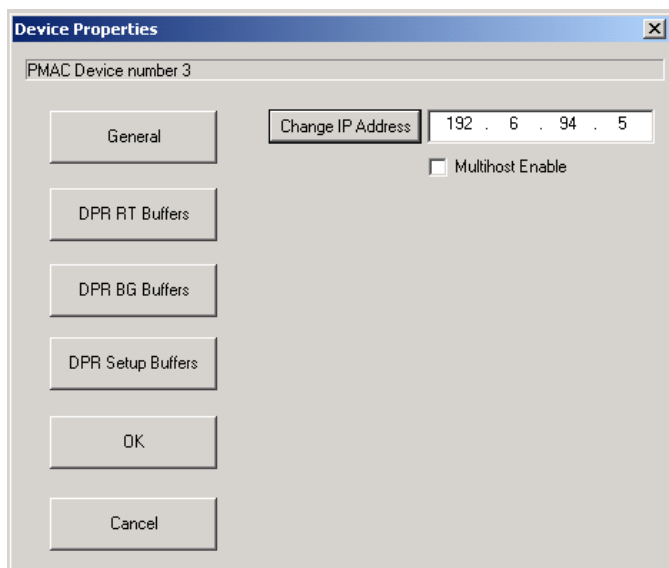

It will take effect on the next power cycle. You must now change the address in the **PMAC Devices** window of the Pro2 Executive.


### Configuring the IP address with the “EthUSBConfigure.exe” application.

Connect the USB cable and power on the PMAC. Launch the application: “EthUSBConfigure.exe”.

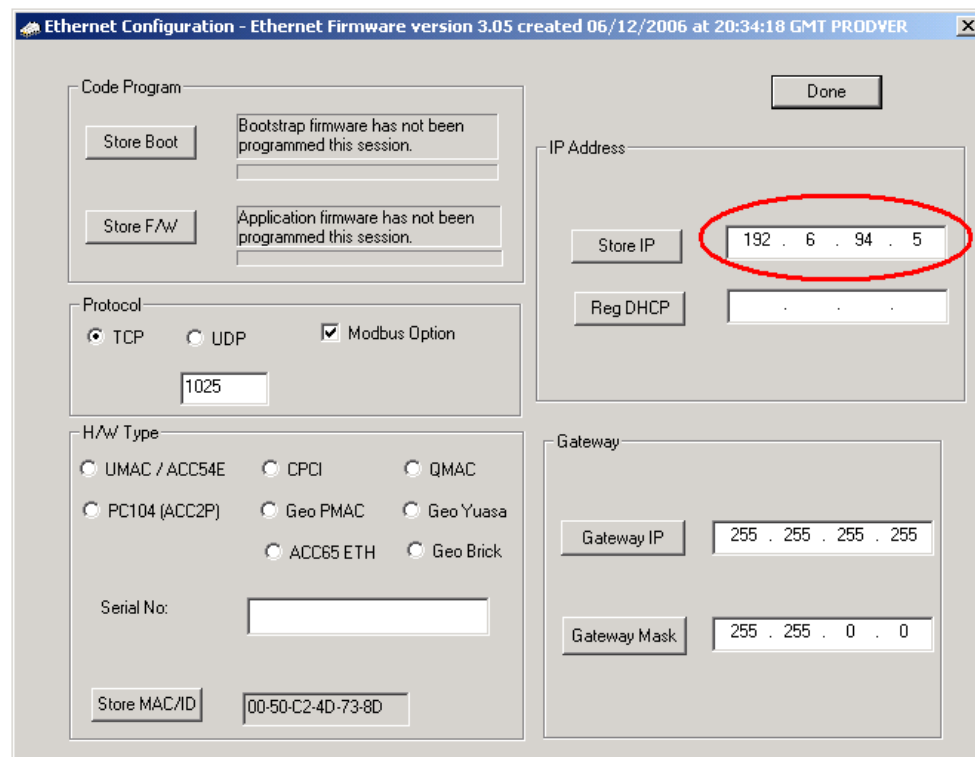


Enter the new IP address in the box shown above.


Click the **Store IP** button. When the following dialog appears, click **Yes**.

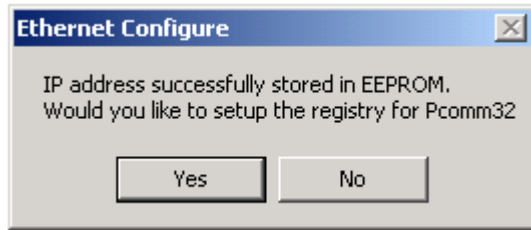


The next dialog will appear. If this is the only instance of an IP address, leave the Card Instance value at zero. If you have multiple instances of IP addresses (multiple PMAC EtherNet cards), enter the instance in the box and click **OK**.

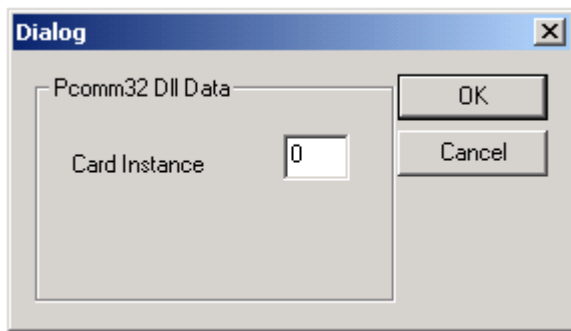

When the following dialog appears, click **OK**.

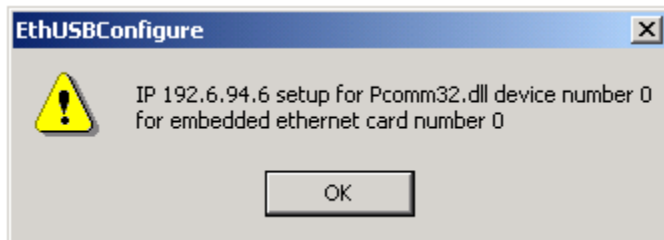

Click the **Done** button. This will take effect on the next PMAC power cycle. You must now change the address in the **PMAC Devices** window of your PMAC application.

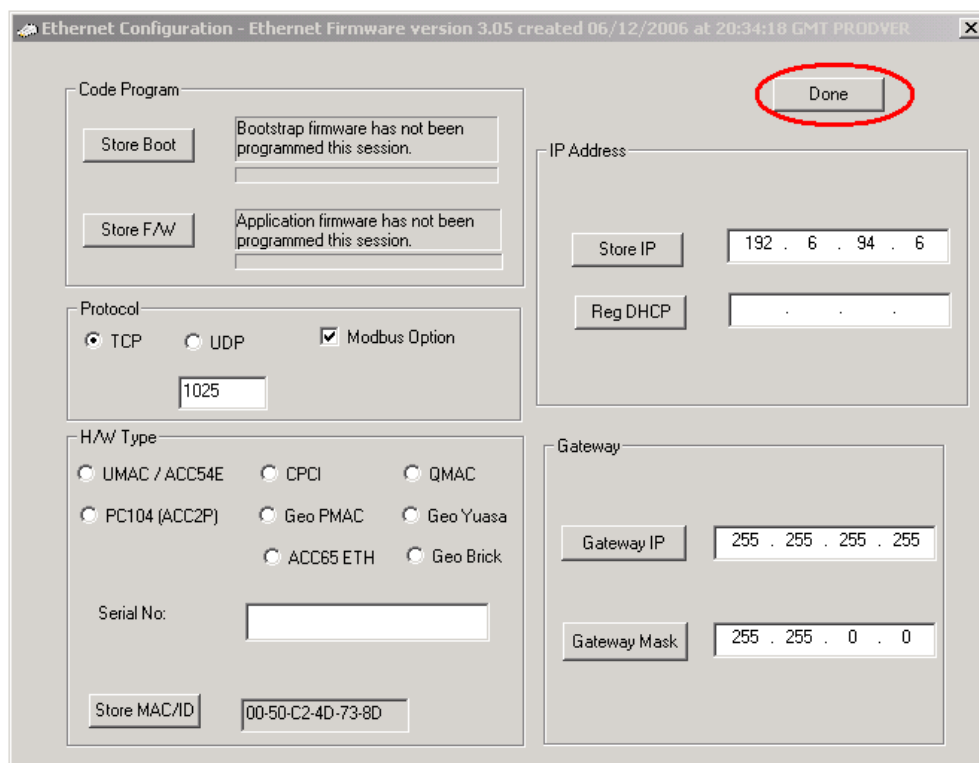

## Configuring USB

Starting with Pewin Pro and Service Pack 2.0, the USB driver support for this revision of the card is bundled with the Pewin Pro installation program. The UMAC USB card will work only with Windows 98, Windows ME, Windows 2000 and Windows XP. It will not function with Windows NT 4.0; this version of Windows does not support plug and play, which is required by all USB devices.

---

### *Note:*

Windows XP is recommended since the UMAC has on-board USB 2.0 and only Windows XP has native USB 2.0 support.


One file is placed on the PC to achieve USB connectivity – device driver PMACUSB.SYS in the WINDOWS\SYSTEM32\DRIVERS directory and the PMACUSB.INF plug and play information file in the WINDOWS\INF directory. When the UMAC is plugged into the PC, a **New Hardware Found** message displays. A series of dialog boxes will appear, indicating that Windows is installing the device drivers for the system.

---


### *Note:*

Plug in the USB cable from the UMAC to the PC after the software Pewin Pro and its Service Pack 2.0 has been installed. If the USB cable is plugged in before the software has been installed, restart Windows.

---

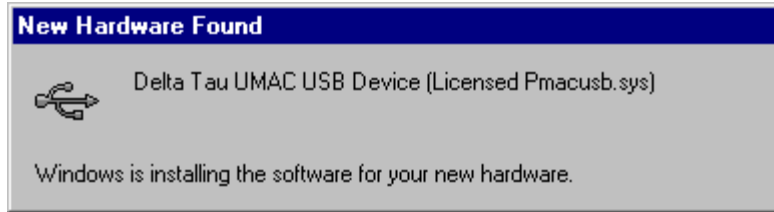

To verify that the software device drivers have been installed properly, right-click on the **My Computer** icon on the desktop. Select **Properties** from the drop-down menu that appears. The **System Properties Windows** dialog box appears. Click the tab titled **Device Manager**. At this point, a list of device categories appears. Click the + to see a list of USB devices. Provided the device driver for the UMAC Turbo CPU/ Communications Board has been installed properly, a dialog box displays, similar to the following:

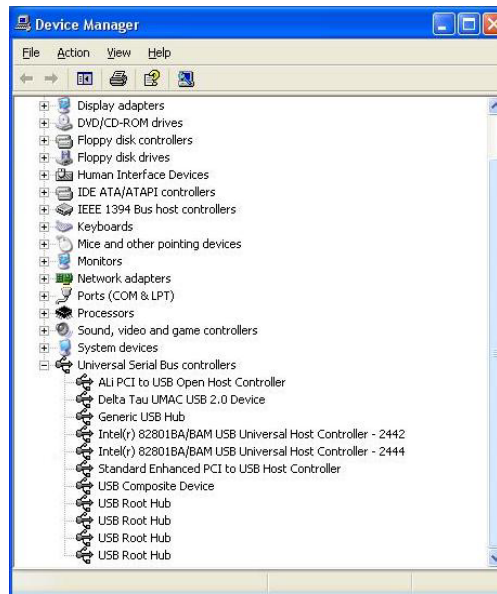



If Delta Tau UMAC USB 2.0 Device is not on the list, the device driver has not been installed. If there is a red x through that line or a yellow exclamation point through that line, then Windows had a problem installing the device.

The appropriate trouble-shooting steps are:

- Reboot the computer and examine this list again.
- If that does not work, ensure that pmacusb.sys is in the Windows\system32\Drivers directory.
- If this is true, when using an older computer, check with the manufacturer to make sure that there is not an update to the BIOS to enable USB on the PC.
- If the Universal Serial Bus Controllers in the device manager dialog box are not on the list, make sure that it is enabled in the BIOS of the computer.


## Using PeWin32 Pro and later to establish communication

Once the driver is installed, it needs additional configuration by using the PmacSelect dialog. The PmacSelect dialog is accessible by all programs created with PComm 32 Pro (via the PmacSelect() function call). Launch the supplied Delta Tau application (Pewin 32 Pro, PMAC Test Pro, or any application) from the program menu and display the **PmacSelect** dialog.

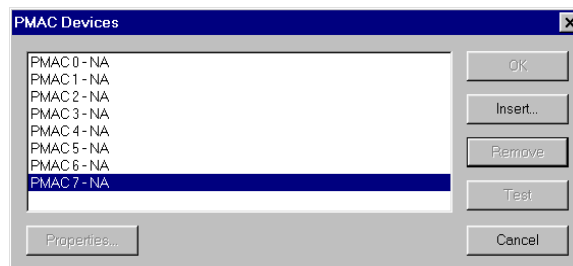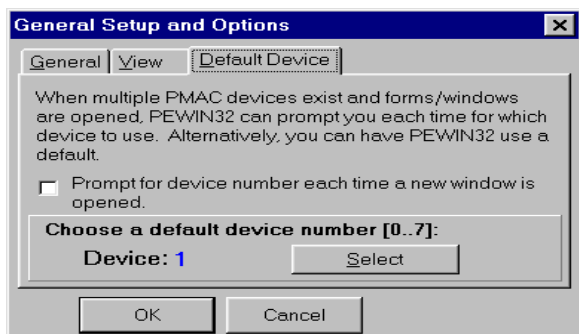


Product	Display the PmacSelect Dialog
Pewin 32 Pro	From the main menu item setup, go to Setup\General Setup and Options. Select the <b>Default Device</b> tab. Click on the <b>Select</b> button.
Pcomm 32 Pro	Run the supplied PmacTest application. From the main menu, select <b>Configure\Communications</b> . Also, the <b>PmacSelect()</b> function can be called from any application that has been coded.
Ptalk DT Pro	Call the <b>SelectDevice()</b> method of Ptalk from the supplied or self-created programs.


From the device selection screen, select the device number to insert a device and click Insert. Another window listing all configured devices will appear.

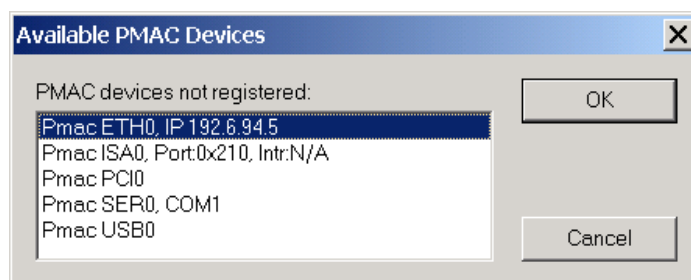

Select the device to configure and click **OK**.

Once a PMAC is listed in the Pmacselect window, it is registered and can accept communication. It is recommended to test a device upon registering. At this time, the following screen displays and this device is ready for use in any application.

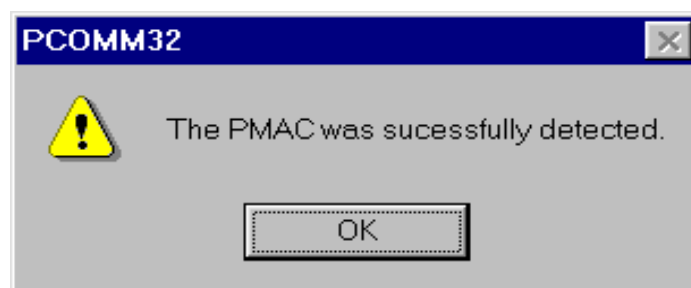

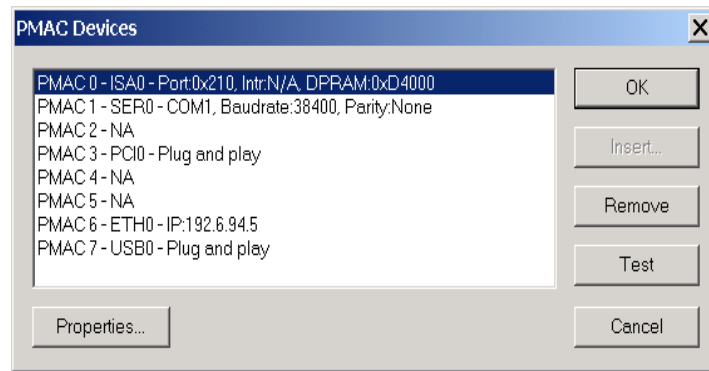



## **Operational Frequency and Baud Rate Setup**

---

I52 controls the operational clock frequency of the Turbo PMAC's CPU by controlling the multiplication factor of the phase-locked loop (PLL) inside the CPU. The PLL circuit multiplies the input 10 MHz (actually 9.83 MHz) clock frequency by a factor of (I52 + 1) to create the clock frequency for the CPU. Formally, this is expressed in the equation:

$$\text{CPU Frequency (MHz)} = 10 * (\text{I52} + 1)$$

I52 should usually be set to create the highest CPU frequency for which the CPU is rated. For the standard 80 MHz CPU, it should be set to 7.

---

### *Note:*

It may be possible to operate a CPU at a frequency higher than its rated frequency, particularly at low ambient temperatures. However, safe operation cannot be guaranteed under these conditions, and any such operation is done entirely at the user's own risk.

---

I52 is actually used at power-on/reset only, so to make a change in the CPU frequency with I52, change the value of I52, store this new value to non-volatile flash memory with the SAVE command, and reset the card with the \$\$\$ command.

If too high a value of I52 has been set, the watchdog timer on the PMAC will likely trip immediately after reset due to CPU operational failure. If this happens, the PMAC must be reinitialized using E3.

## Filtered DAC Output Configuration

The Clipper Board +/-10V DAC outputs are produced by filtering a PWM signal. Although this technique does not contain the same levels of performance as a true Digital to Analog converter, for most servo applications it is more than adequate. This section is meant for explaining the tradeoffs of PWM frequency vs. resolution in the Clipper Board configuration as well as a comparison to the true 18 bit DACs.

Both the resolution and the frequency of the Filtered PWM outputs are configured in software on the Clipper Board through the variable **I7000**. This variable also effects the phase and servo interrupts. Therefore as we change **I7000** we will also have to change **I7001** (phase clock divider), **I7002** (servo clock divider), and **I10** (servo interrupt time). These four variables are all related and must be understood before adjusting parameters.

Since the Clipper Board uses standard Turbo PMAC2 firmware the following I-variables must be set properly to use the digital-to-analog (filtered DAC) outputs:

```

I7000 = 1001          ; PWM frequency 29.4kHz, PWM 1-4
I7001 = 5             ; Phase Clock 9.8kHz
I7002 = 3             ; Servo frequency 2.45kHz
I7003 = 1746          ; ADC frequency
I7100 = 1001          ; PWM frequency 29.4kHz, PWM 5-8
I7103 = 1746          ; ADC frequency
I70n6 = 0             ; Output mode: PWM
Ixx69 = 1001          ; DAC limit 10Vdc
I10   = 3421867       ; Servo interrupt time

```

n = channel number from 1 to 8

xx = motor number from 1 to 8

## Parameters to Set up Global Hardware Signals

### I7000

**I7000** determines the frequency of the **MaxPhase** clock signal from which the actual phase clock signal is derived. It also determines the PWM cycle frequency for Channels 1 to 4. This variable is set according to the equation:

$$I7000 = \text{INT}[117,964.8 / (4 * \text{PWMFreq(KHz)}) - 1]$$

The Clipper Board filtered PWM circuits were optimized for about 30KHz. The minimum frequency **I7000** should be set to is 1088 (calculated as 27.06856KHz)

### I7001

**I7001** determines how the actual phase clock is generated from the **MaxPhase** clock, using the equation:

$$\text{PhaseFreq(kHz)} = \text{MaxPhaseFreq(kHz)} / (I7001+1)$$

**I7001** is an integer value with a range of 0 to 15, permitting a division range of 1 to 16. Typically, the phase clock frequency is in the range of 8 kHz to 12 kHz. About 9 KHz is standard, set **I7001** = 5.

### I7002

**I7002** determines how the servo clock is generated from the phase clock, using the equation:

$$\text{ServoFreq(KHz)} = \text{PhaseFreq(KHz)} / (\text{I7002}+1)$$

**I7002** is an integer value with a range of 0 to 15, permitting a division range of 1 to 16. On the servo update, which occurs once per servo clock cycle, PMAC updates commanded position (interpolates) and closes the position/velocity servo loop for all active motors, whether or not commutation and/or a digital current loop is closed. Typical servo clock frequencies are 1 to 4 kHz. The PMAC standard is about 2 KHz, set **I902** = 3.

**I10** tells the Clipper Board interpolation routines how much time there is between servo clock cycles. It must be changed any time **I7000**, **I7001**, or **I7002** is changed. **I10** can be set according to the formula:

$$\text{I10} = (2 * \text{I7000} + 3) * (\text{I7001} + 1) * (\text{I7002} + 1) * 640 / 9$$

**I10** should be set to 3421867.

## **I7003**

**I7003** determines the frequency of four hardware clock signals used for machine interface channels 1-4; This can be left at the default value (**I7003**=\*) unless the on board Option-12 ADCs are used. The four hardware clock signals are SCLK (encoder sample clock), PFM\_CLK (pulse frequency modulator clock), DAC\_CLK (digital-to-analog converter clock), and ADC\_CLK (analog-to-digital converter clock).

## **Parameters to Set Up Per-Channel Hardware Signals**

### **I70n6**

**I70n6** is the output mode; “n” is the output channel number (i.e. for channel 1 the variable to set would be **I7016**, **I7026** for channel 2 etc.). On Pmac1, there is only one output and one output mode: DAC output. On PMAC2 boards, each channel has 3 outputs, and there are 4 output modes. Since this board was designed to output filtered PWM signals, we want to configure at least the first output as PWM. Therefore the default value of 0 is the choice. For information on this variable consult the Turbo Software Reference Manual.

### **Ixx69**

**Ixx69** is the motor output command limit. The analog outputs on PMAC1 style boards and some PMAC2 accessories are 16-bit or 18-bit DACs, which map a numerical range of -32,768 to +32,767 into a voltage range of -10V to +10V relative to analog ground (AGND). For our purposes of a filtered PWM output this value still represents the maximum voltage output; however, the ratio is slightly different. With a true DAC, **Ixx69**=32767 allows a maximum voltage of 10V output. With the filtered PWM circuit, **Ixx69** is a function of **I7000**. A 10V signal in the output register is no longer 32767 as was in PMAC1, a 10V signal corresponds to a value equal to **I7000**. Anything over **I7000** will just rail the DAC at 10V. For example:

*Desired Maximum Output Value = 6V*

$$\text{Ixx69} = 6/10 * \text{I7000}$$

*Desired Maximum Output Value = 10V*

$$\text{Ixx69} = \text{I7000} + 10 \quad ; \text{ add a little headroom to assure a full 10V}$$

## **Effects of Changing I7000 on the System**

It should now be understood that a full 10 volts is output when the output register is equal to **I7000**. The output register is suggested m-variable **Mxx02** (I.e. **M102**→**Y:\$078002,8,16,S** ; **OUT1A** command value; DAC or PWM). With default setting of **I7000**, 10 volts is output when **M102** is equal to **I7000**, or 1001.

Since the output register is an integer value the smallest increment of change is about 10mV (1/1001 \* 10V). Some users may want to calibrate their analog output using Ixx29. Ixx29 is an integer similar to Mxx02 except the value is added to the output register every servo cycle to apply a digital offset to the output register. Therefore the resolution of our output signal affects how Ixx29 should be set. As mentioned earlier, with the default parameters, 1 bit change in the output register changes the analog output by about 10mV. Therefore if there is an analog output offset less than 5mV, Ixx29 cannot decrease your offset. By increasing I7000 you increase your resolution, so if you double I7000, 1 bit change in the output register corresponds to about 5mV. So with Ixx29 you can only change the offset in increments of 5mV.

You can see above that by increasing I7000 you increase the resolution of our command output register. While this does offer some advantages, users should carefully consider the tradeoffs when changing I7000 between resolution and ripple.

By increasing I7000 we are essentially decreasing our PWM Frequency. The two are related by the following equation:

$$I7000 = \text{INT}[117,964.8 / (4 * \text{PWMFreq(KHz)}) - 1]$$

Passing the PWM signal through a 10KHz low pass filter creates the +/-10V signal output. The duty cycle of the PWM signal is what generates the magnitude the voltage output. The frequency of the PWM signal determines the magnitude and frequency of ripple on that +/-10V signal. As you lower the PWM frequency and subsequently increase your output resolution, you increase the magnitude of the ripple as well as slow down the frequency of the ripple as well. Depending on the system, this ripple can affect performance at different levels.

So what do we mean by ripple? Ripple is the small signal that will you will see on top of the +/-10V signal if you put an oscilloscope on it. In other words, if users command a 4V signal out of the Clipper Board and scope it, the result is a small sinusoidal type wave centered on 4V. At the default PWM frequency and output resolution this will have a magnitude of about 250mV to 450mV and a frequency of about 30kHz. This is typically faster than any of the control loops so the amplifier essentially filters it out of the system.

For example, to double the resolution of the output signal, users merely double the I7000 value from 1001 to 2002. How does this affect the ripple? Testing shows the ripple magnitude to increase from around 300mV to well over 800mV. The frequency of the ripple decreased from about 30kHz to about 15kHz. Here are some measurements taken with a Clipper Board:

<b>I7000 Value</b>	<b>Output Resolution Signed</b>	<b>Voltage Output Change Per 1bit increment In output register</b>	<b>PWM Frequency</b>	<b>Approximate Ripple Magnitude</b>	<b>Approximate Ripple Frequency</b>
1001	@11 bit	9.9mV	29.4177 KHz	300mV	30 KHz
2002	@12 bit	4.99mV	14.72 KHz	800mV	15 KHz
4004	@13bit	2.49mV	7.36 KHz	2V	7 Khz

How does the ripple affect servo performance? It really depends on the system. For most servo systems the mechanics can't respond anywhere near these frequencies. Some systems with linear amplifiers will affect the performance especially as you lower the PWM frequency and effectively the ripple frequency, i.e. galvanometers, etc. In the overall majority of the servo world, these ripple frequencies will not show

in the system due to mechanical and electrical time constants of most systems. This will happen regardless of the amplifier used.

So why is the recommended setup for 30 KHz? The first reason is aesthetics. Nobody wants to put a scope on an output signal and see 1 or 2V of hash. If you increase that frequency, the hash is minimized. The second reason is response of the output with respect to the servo filter. If you increase the output resolution and thus lower the PWM frequency far enough, you will notice some lag in the system from the delays between the output register values actually being picked up by the slower PWM frequency.

For high response systems we suggest using ACC-8ES and a true 18bit DAC. However the filtered PWM technique will be more than adequate for most applications.

## How changing I7000 affects other settings in PMAC

I7000 is does not only set the PWM frequency for the PWM outputs, but it also sets the Max Phase Frequency.

$$\text{MaxPhase Frequency} = 117,964.8 \text{ KHz} / [2 * I7000 + 3]$$

$$\text{PWM Frequency} = 117,964.8 \text{ KHz} / [4 * I7000 + 6]$$

The Max Phase Frequency is then divided by I7001 to generate the frequency for the phase interrupt and its routines. **If you change I7000, you have to change I7001 to keep the same phase interrupt.**

$$\text{PHASE Clock Frequency} = \text{MaxPhase Frequency} / (I7001 + 1)$$

The Phase Clock Frequency setting also affects the servo interrupt frequency. **If you change the phase interrupt frequency then you must change I7002 to keep the same servo interrupt.**

$$\text{Servo Clock Frequency} = \text{PHASE Clock Frequency} / (I7002 + 1)$$

When you change the servo interrupt, you must always change the servo interrupt time – I10 – to match, or all of your timing will be off in PMAC.

$$I10 = 8388608 / (\text{Servo Frequency (KHz)}) = 8388608 * \text{ServoTime(msec)}$$

If you decide to change I7000, be sure to reset Ixx69 to the proper safety setting per the following formula:

$$Ixx69 = \text{MaxVolts} / 10 * I7000$$

Examples:

Default Example:

$$I7000 = 1001$$

$$I7001 = 5$$

$$I7002 = 3$$

$$Ixx69 = 1024$$

$$I10 = 3421867$$

$$\text{MaxPhase Frequency} = 117,964.8 \text{ kHz} / [2 * 1001 + 3] = 58.835 \text{ KHz}$$

$$\text{PWM Frequency} = 117,964.8 \text{ kHz} / [4 * 1001 + 6] = 29.418 \text{ KHz}$$

$$\text{PHASE Clock Frequency} = \text{MaxPhase Frequency} / (5 + 1) = 9.805 \text{ KHz}$$

$$\text{Servo Clock Frequency} = \text{PHASE Clock Frequency} / (3 + 1) = 2.451 \text{ KHz}$$

$$I10 = 8388608 / (2.451471) = 3421867$$

$$Ixx69 = 10V / 10 * I900 = 1001 \text{ add headroom to } 1024$$

To double the resolution, observe the following:

$$I7000=2002$$

$$MaxPhase Frequency = 117,964.8 KHz / [2*2002+3] = 29.44 KHz$$

$$PWM Frequency = 117,964.8 KHz / [4*2002+6] = 14.72 KHz$$

In order to save headroom on firmware routines that trigger off the phase and servo interrupts, it is best to keep those frequencies about the same as above. Some systems may want higher phase and servo interrupt frequencies for better servo performance, but these default frequencies are typically more than fast enough for many applications. Tuning parameter are discussed elsewhere in this document.

$$I7001 = 29.44 KHz / 19.61 KHz - 1 = @0.5 \text{ set it at } 1 \text{ or } 14.72 KHz$$

This is not exactly the same since I7001 is an integer value but the result is close enough for most users. Since we are doing any commutation with a +/-10V signal, it doesn't make that much of a difference. The Servo Frequency we will be able to get close though:

$$I7002 = 14.72 KHz / 4.9 - 1 = 2.004 \text{ or } 2 \text{ which is @ } 4.9 KHz$$

For a 10V max signal output:

$$Ixx69 = I900 + headroom = 2024$$

We must set I10 whenever we change the servo clock but since we kept it basically the same, I10 stays pretty much the same. Without rounding it works out to the following:

$$I10 = 8388608 / 4.906613 = 1709653$$

For precise timing within your motion application, it is important not to round off when calculating I10.

## Effects of Output Resolution and Servo Interrupt Frequency on Servo Gains

When you change your output resolution and/or servo interrupt timing, your tuning parameters will no longer respond the same. The system will have to be tuned again in order to achieve the desired performance. There is an approximate relation of output resolution to servo loop gains. If you were switching an application from a PMAC style 16bit DAC to a Clipper Board with default resolution of about 11bits you can expect a change of your gains in order to get similar response.

The max output value of the output command with a 16bit DAC is 32767. With the Clipper Board at its default parameters, the max output value is 1001. If you had equal servo interrupt frequencies, the proportional gain on the Clipper Board would have a proportional gain 1001/32767 or about 1/32 smaller. This is more a rule of thumb than an exact formula. It is always recommended to go through a full tuning procedure when changing output resolution.

If you decide to change the Servo Interrupt Frequency, then you are also changing the dynamics of the servo filter and thus the system. You will need to retune the system in order to get the desired performance. If you increase the servo frequency you will need to lower the proportional gain in order to achieve similar performance. The reason you increased the frequency in the first place was more likely to achieve a higher performance, so relations here are not very helpful.

If you desire to change servo interrupt frequency in order to have your foreground PLCs execute more often you can also adjust Ixx60 to keep your gains the same. See the Turbo PMAC Software Reference Manual for a further description of this parameter.

## Using Flag I/O as General-Purpose I/O

Either the user flags or other not assigned axes flag on the base board can be used as general-purpose I/O for up to 20 inputs and 4 outputs at 5-24Vdc levels. The indicated suggested M-variables definitions, which are defined in the Software reference, allows accessing each particular line according to the following table:

Flag	Type	Channel Number			
		#1	#2	#3	#4
HOME	5-24 VDC Input	M120	M220	M320	M420
PLIM	5-24 VDC Input	M121	M221	M321	M421
MLIM	5-24 VDC Input	M122	M222	M322	M422
USER	5-24 VDC Input	M115	M215	M315	M415
AENA	5-24 VDC Output	M114	M214	M314	M414

---

### *Note:*

When using these lines as regular I/O points the appropriate setting of the Ixx24 variable must be used to enable or disable the safety flags feature.

---

## Analog Inputs Setup

The optional analog-to-digital converter inputs are ordered either through Option-12 or Option-2 on the axes expansion board. Each option provides two 12-bit analog inputs with a  $\pm 10$ Vdc range. The M-variables associated with these inputs provided a range of values between +2048 and -2048 for the respective  $\pm 10$ Vdc input range. The following is the software procedure to setup and read these ports.

### CPU Analog Inputs

```
I7003 = 1746 ;Set ADC clock frequency at 4.9152 MHz
I7006 = $1FFFF ;Clock strobe set for bipolar inputs
M105->Y:$78005,12,12,S ;ADCIN_1 on JMACH1 connector pin 45
M205->Y:$7800D,12,12,S ;ADCIN_2 on JMACH1 connector pin 46
```

## General-Purpose Digital Inputs and Outputs

The lines on the JOPT general-purpose I/O connector will be mapped into PMAC's address space in register Y:\$78400.

Typically, these I/O lines are accessed individually with M-variables. Following is a suggested set of M-variable definitions to use these data lines.

```
M0->Y:$78400,0 ; Digital Output M00
M1->Y:$78400,1 ; Digital Output M01
M2->Y:$78400,2 ; Digital Output M02
M3->Y:$78400,3 ; Digital Output M03
M4->Y:$78400,4 ; Digital Output M04
M5->Y:$78400,5 ; Digital Output M05
M6->Y:$78400,6 ; Digital Output M06
M7->Y:$78400,7 ; Digital Output M07
M8->Y:$78400,8 ; Digital Input MI0
M9->Y:$78400,9 ; Digital Input MI1
M10->Y:$78400,10 ; Digital Input MI2
```



```

M11->Y:$78400,11      ; Digital Input MI3
M12->Y:$78400,12      ; Digital Input MI4
M13->Y:$78400,13      ; Digital Input MI5
M14->Y:$78400,14      ; Digital Input MI6
M15->Y:$78400,15      ; Digital Input MI7
M32->X:$78400,0,8      ; Direction Control bits 0-7 (1=output, 0 = input)
M34->X:$78400,8,8      ; Direction Control bits 8-15 (1=output, 0 = input)
M40->X:$78404,0,24     ; Inversion control (0 = 0V, 1 = 5V)
M42->Y:$78404,0,24     ; J9 port data type control (1 = I/O)

```

In order to properly setup the digital outputs, an initialization PLC must be written scanning through once on power-up/reset, then disabling itself:

```

OPEN PLC1 CLEAR
M32=$FF                ;BITS 0-8 are assigned as output
M34=$0                 ;BITS 9-16 are assigned as input
M40=$FF00              ;Define inputs and outputs
M42=$FFFF              ;All lines are I/O type
DIS PLC1               ;Disable PLC1 (scanning through once on
                        ;power-up/reset)
CLOSE

```

---

***Note:***

After loading this program, set I5=2 or 3 and ENABLE PLC 1.

---

## Thumbwheel Port Digital Inputs and Outputs

The inputs and outputs on the thumbwheel multiplexer port J8 may be used as discrete, non-multiplexed I/O. In this case, these I/O lines can be accessed through M-variables:

```

M40->Y:$78402,8,1      ; SEL0 Output
M41->Y:$78402,9,1      ; SEL1 Output
M42->Y:$78402,10,1     ; SEL2 Output
M43->Y:$78402,11,1     ; SEL3 Output
M44->Y:$78402,12,1     ; SEL4 Output
M45->Y:$78402,13,1     ; SEL5 Output
M46->Y:$78402,14,1     ; SEL6 Output
M47->Y:$78402,15,1     ; SEL7 Output
M48->Y:$78402,8,8,U     ; SEL0-7 Outputs treated as a byte
M50->Y:$78402,0,1      ; DAT0 Input
M51->Y:$78402,1,1      ; DAT1 Input
M52->Y:$78402,2,1      ; DAT2 Input
M53->Y:$78402,3,1      ; DAT3 Input
M54->Y:$78402,4,1      ; DAT4 Input
M55->Y:$78402,5,1      ; DAT5 Input
M56->Y:$78402,6,1      ; DAT6 Input
M57->Y:$78402,7,1      ; DAT7 Input
M58->Y:$78402,0,8,U     ; DAT0-7 Inputs treated as a byte

```

## Setup of a fifth motor using opt-12 on the Clipper board.

The DSPGATE2A supplemental channels are set with I6800-6807. Set these to the same values as specified for the filtered PWM outputs (leave I6804-I6807 at default):

```

I6800 = 1001           ; PWM frequency 29.4kHz, PWM 1-4
I6801 = 5               ; Phase Clock 9.8kHz

```



```
I6802 = 3           ; Servo frequency 2.45kHz
I6803 = 1746        ; ADC frequency
I68n6 = 0           ; Output mode: PWM
Ixx69 = 1001        ; DAC limit 10Vdc
                        ;n = supplementary channels 1 and 2
;xx = motor number from 5 to 32
```

The encoder decode I-variables are I68n0-68n9 (n=1 or 2). Set these for your encoders as normal. Note there are no inputs for flags so capture I-variables are not used. The Output Command Registers (Ixx02) now must point to the DSPGATE2A 3<sup>rd</sup> Channel Outputs at \$78414 and \$7841C first and second supplemental registers respectively. The addresses of the DSPGATE2A Counters/Timers used in the encoder conversion table are \$78410 and \$78418 first and second supplementary registers respectively. The encoder counter registers are at:


```
Mxx->X:$78411,0,24,s // first counter register
Mxx->X:$78419,0,24,s // second counter register
```

## **HARDWARE REFERENCE SUMMARY**


---

The following information is based on the Clipper Board, part number 603871.

## Board Dimensions and Layout

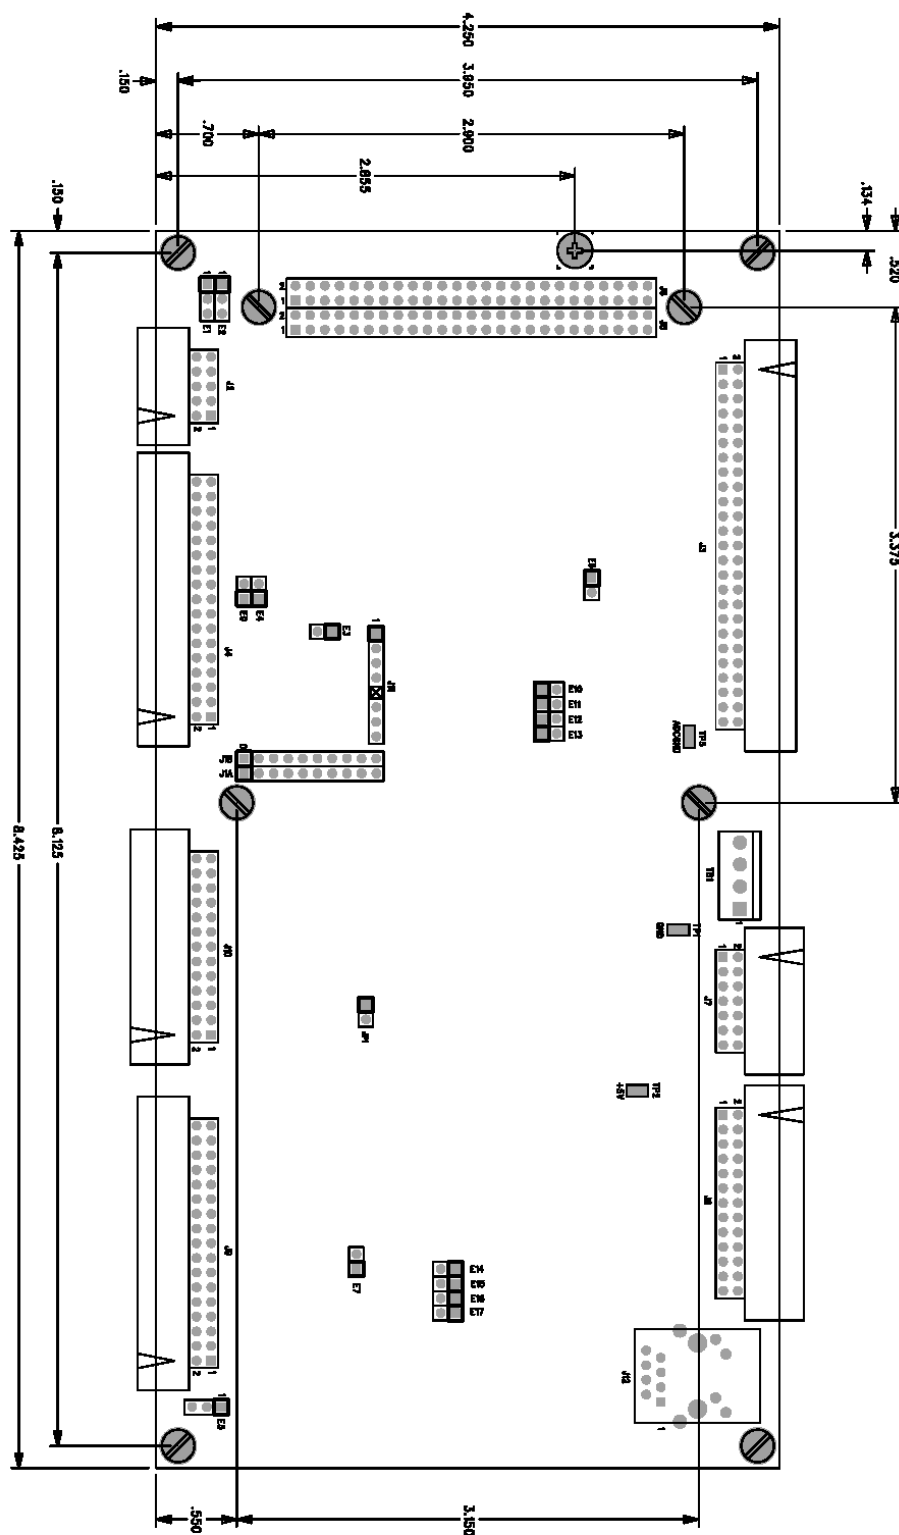

Layout for REV-100 and REV-102

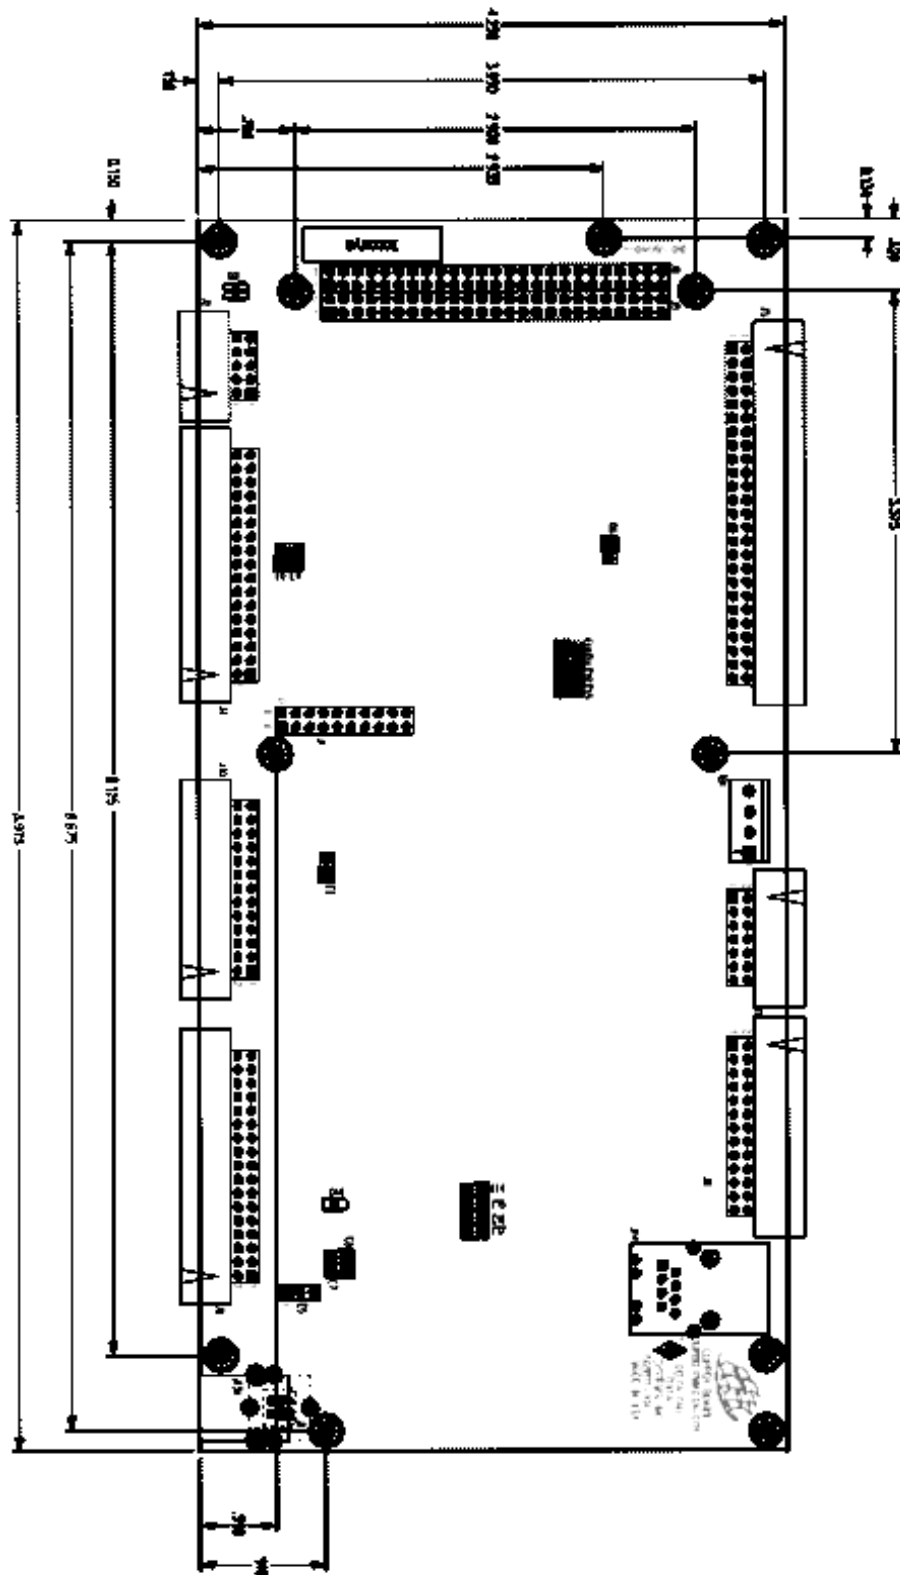

Layout for REV-103 and REV-104

## **Connectors and Indicators**

---

### **J2 - Serial Port (JRS232 Port)**

This connector allows communicating with PMAC from a host computer through a RS-232 port. Delta Tau provides the Accessory 3L cable that connects the PMAC to a DB-9 connector.

1. 10-pin female flat cable connector T&B Ansley P/N 609-1041
2. Standard flat cable stranded 10-wire T&B Ansley P/N 171-10

### **J3 - Machine Connector (JMACH1 Port)**

The primary machine interface connector is JMACH1, labeled J3 on the PMAC. It contains the pins for four channels of machine I/O: analog outputs, incremental encoder inputs, amplifier fault and enable signals and power-supply connections.

1. 50-pin female flat cable connector T&B Ansley P/N 609-5041
2. Standard flat cable stranded 50-wire T&B Ansley P/N 171-50
3. Phoenix varioface module type FLKM 50 (male pins) P/N 22 81 08 9

### **J4 - Machine Connector (JMACH2 Port)**

This machine interface connector is labeled JMACH2 or J4 on the PMAC. It contains the pins for four channels of machine I/O: end-of-travel input flags, home flag and pulse-and-direction output signals. In addition, the B\_WDO output allows monitoring the state of the Watchdog safety feature.

1. 34-pin female flat cable connector T&B Ansley P/N 609-3441
2. Standard flat cable stranded 34-wire T&B Ansley P/N 171-34
3. Phoenix varioface module type FLKM 34 (male pins) P/N 22 81 06 3

### **J7 - Machine Connector (JMACH3 Port)**

This machine interface connector is labeled JMACH3 or J7 on the PMAC. It contains the pins for four channels of U, V, and W flags normally used for hall device commutation.

1. 14-pin female flat cable connector Delta Tau P/N 014-R00F14-0K0, T&B Ansley P/N 609-1441
2. 171-14 T&B Ansley standard flat cable stranded 14-wire
3. Phoenix varioface modules type FLKM14 (male pins) P/N 22 81 02 1

### **J8 - Thumbwheel Multiplexer Port (JTHW Port)**

The Thumbwheel Multiplexer Port, or Multiplexer Port, on the JTHW connector has eight input lines and eight output lines. The output lines can be used to multiplex large numbers of inputs and outputs on the port, and Delta Tau provides accessory boards and software structures (special M-variable definitions) to capitalize on this feature. Up to 32 of the multiplexed I/O boards may be daisy-chained on the port, in any combination.

1. 26-pin female flat cable connector T&B Ansley P/N 609-2641
2. Standard flat cable stranded 26-wire T&B Ansley P/N 171.26
3. Phoenix varioface module type FLKM 26 (male pins) P/N 22 81 05 0

### **J9 - General-Purpose Digital Inputs and Outputs (JOPT Port)**

Acc-1P's JOPT connector provides eight general-purpose digital inputs and eight general-purpose digital outputs. Each input and each output has its own corresponding ground pin in the opposite row. The 34-pin connector was designed for easy interface to OPTO-22 or equivalent optically isolated I/O modules. Delta Tau's Acc-21F is a six-foot cable for this purpose.

1. 34-pin female flat cable connector T&B Ansley P/N 609-3441
2. Standard flat cable stranded 34-wire T&B Ansley P/N 171-34

3. Phoenix varioface module type FLKM 34 (male pins) P/N 22 81 06 3

### **J10 – Handwheel and Pulse/Dir Connector (JHW/PD Port)**

This connector is labeled JHW/PD or J10 on the PMAC. It provides pins for the two channels of Quadrature encoder inputs and Pulse and direction (PFM or PWM) output pairs from the DSPGate2 supplemental channels 1\* and 2\*.

1. 26-pin female flat cable connector T&B Ansley P/N 609-2641
2. Standard flat cable stranded 26-wire T&B Ansley P/N 171.26
3. Phoenix varioface module type FLKM 26 (male pins) P/N 22 81 05 0

### **J12 – Ethernet Communications Port**

This connector provides access to the Ethernet communications feature. See the Machine Connections chapter for details on using this port.

### **J13 – USB Communications Port**

This connector provides access to the USB communications feature. See the Machine Connections chapter for details on using this port.

### **JP11 – OPT-11 Shunt**

Not present if OPT-11 is installed. For internal use only.

### **TB1 – Power Supply Terminal Block (JPWR Connector)**

This terminal block is the power supply connector for the board.

1. 4-pin terminal block, 0.150 pitch


### **LED Indicators**

**D3:** This is a dual color LED. When this LED is green, it indicates that power is applied to the +5V input when this LED is red, it indicates that the watchdog timer has tripped.




## E-POINT JUMPER DESCRIPTIONS


### E0: Forced Reset Control

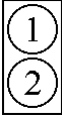E Point and Physical Layout	Location	Description	Default
<b>E0</b> 		Factory use only; the board will not operate with E0 installed.	No jumper


### E1 – E2: Serial Port Selection (rev 102 and below only)

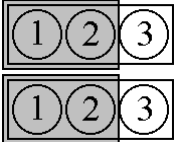E Point and Physical Layout	Location	Description	Default
<b>E1</b>  <b>E2</b>		These jumpers select the target CPU for the serial port as either the main PMAC CPU or the Ethernet CPU (change IP address). Both jumpers must be set the same. <ul style="list-style-type: none"> <li>• 1-2 for Main CPU</li> <li>• 2-3 for Ethernet CPU</li> </ul>	1-2 Jumper installed

### E3: Normal/Re-Initializing Power-Up/Reset

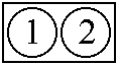
E Point and Physical Layout	Location	Description	Default
<b>E3</b> 		Jump pin 1 to 2 to re-initialize on power-up/reset, loading factory default settings. Remove jumper for normal power-up/reset, loading user-saved settings.	No jumper installed

### E4: Watchdog Disable Jumper

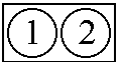
E Point and Physical Layout	Location	Description	Default
<b>E4</b> 		Jump pin 1 to 2 to disable Watchdog timer (for test purposes only). Remove jumper to enable Watchdog timer.	No jumper



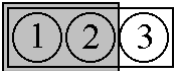

## E5: Ethernet Port CPU Write Control Jumper

E Point and Physical Layout	Location	Description	Default
<p>E5</p> 		For factory use only; the board will not operate unless 1-2 Jumper is installed.	1-2 Jumper installed

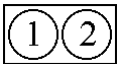

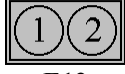
## E6: ADC Inputs Enable

E Point and Physical Layout	Location	Description	Default
<p>E6</p> 		<p>Jump pin 1 to 2 to enable the Option-12 ADC inputs.</p> <p>Remove jumper to disable the ADC inputs, which might be necessary for reading current feedback signals from digital amplifiers.</p>	No jumper


## E7 – E8: Power-Up State Jumpers

E Point and Physical Layout	Location	Description	Default
<p>E7</p>  <p>E8</p> 		<p>E7 is the reset on power jumper for the USB/EtherNet CPU, remove before power cycle to reset.</p> <p>E8 is the USB/EtherNet CPU write protect jumper, remove to enable.</p>	E7 and E8 jumpers installed.

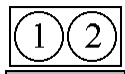



## E10 – E12: Power-Up State Jumpers

E Point and Physical Layout	Location	Description	Default
<p>E10</p>  <p>E11</p>  <p>E12</p> 		<p>Remove jumper E10;</p> <p>Jump E11;</p> <p>Jump E12;</p> <p>To read flash IC on power-up/reset</p> <p>Other combinations are for factory use only; the board will not operate in any other configuration.</p>	<p>No E10 jumper installed;</p> <p>Jump E11 and E12</p>

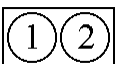
## E13: Power-Up/Reset Load Source

E Point and Physical Layout	Location	Description	Default
<b>E13</b> 		Jump pin 1 to 2 to reload firmware through serial or bus port. Remove jumper for normal operation.	No jumper

## E14- E17: Ports Direction Control

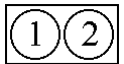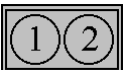E Point and Physical Layout	Location	Description	Default
<b>E14</b> 		Install jumper to make DATx lines inputs. No jumper to make DATx lines outputs.	Jumper installed
<b>E15</b> 		Install jumper to make SELx lines inputs. No jumper to make SELx lines outputs.	No jumper
<b>E16</b> 		Install jumper to make MOx lines inputs. No jumper to make MOx lines outputs.	No jumper
<b>E17</b> 		Install jumper to make MIx lines inputs. No jumper to make MIx lines outputs.	Jumper installed

## CONNECTOR PINOUTS
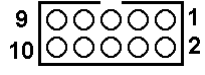
<b>J2 (JRS232) Serial Port Connector</b> (10-PIN CONNECTOR)				 <b>Front View</b>
Pin#	Symbol	Function	Description	Notes
1	PHASE	Output	Phasing Clock	
2	DTR	Bidirect	Data Terminal Ready	Tied to "DSR"
3	TXD/	Input	Receive Data	Host transmit data
4	CTS	Input	Clear to Send	Host ready bit
5	RXD/	Output	Send Data	Host receive data
6	RTS	Output	Request to Send	PMAC ready bit
7	DSR	Bidirect	Data Set Ready	Tied to "DTR"
8	SERVO	Output	Servo Clock	
9	GND	Common	Digital Common	
10	+5V	Output	+5Vdc Supply	Power supply out

### J3 (JMACH1): Machine Port Connector

(50-Pin Header)




Top View

Pin#	Symbol	Function	Description	Notes
1	+5V	Output	+5V Power	For encoders, 1
2	+5V	Output	+5V Power	For encoders, 1
3	GND	Common	Digital Common	For encoders, 1
4	GND	Common	Digital Common	For encoders, 1
5	CHA1	Input	Encoder A Channel Positive	2
6	CHA2	Input	Encoder A Channel Positive	2
7	CHA1/	Input	Encoder A Channel Negative	2,3
8	CHA2/	Input	Encoder A Channel Negative	2,3
9	CHB1	Input	Encoder B Channel Positive	2
10	CHB2	Input	Encoder B Channel Positive	2
11	CHB1/	Input	Encoder B Channel Negative	2,3
12	CHB2/	Input	Encoder B Channel Negative	2,3
13	CHC1	Input	Encoder C Channel Positive	2
14	CHC2	Input	Encoder C Channel Positive	2
15	CHC1/	Input	Encoder C Channel Negative	2,3
16	CHC2/	Input	Encoder C Channel Negative	2,3
17	CHA3	Input	Encoder A Channel Positive	2
18	CHA4	Input	Encoder A Channel Positive	2
19	CHA3/	Input	Encoder A Channel Negative	2,3
20	CHA4/	Input	Encoder A Channel Negative	2,3
21	CHB3	Input	Encoder B Channel Positive	2
22	CHB4	Input	Encoder B Channel Positive	2
23	CHB3/	Input	Encoder B Channel Negative	2,3
24	CHB4/	Input	Encoder B Channel Negative	2,3
25	CHC3	Input	Encoder C Channel Positive	2
26	CHC4	Input	Encoder C Channel Positive	2
27	CHC3/	Input	Encoder C Channel Negative	2,3
28	CHC4/	Input	Encoder C Channel Negative	2,3
29	DAC1	Output	Analog Output Positive 1	4
30	DAC2	Output	Analog Output Positive 2	4
31	DAC1/	Output	Analog Output Negative 1	4,5
32	DAC2/	Output	Analog Output Negative 2	4,5
33	AENA1/	Output	Amplifier-Enable 1	
34	AENA2/	Output	Amplifier -Enable 2	
35	FAULT1/	Input	Amplifier -Fault 1	6
36	FAULT2/	Input	Amplifier -Fault 2	6
37	DAC3	Output	Analog Output Positive 3	4
38	DAC4	Output	Analog Output Positive 4	4
39	DAC3/	Output	Analog Output Negative 3	4,5

## J3 JMACH1 (50-Pin Header)

(Continued)



Pin#	Symbol	Function	Description	Notes
40	DAC4/	Output	Analog Output Negative 4	4,5
41	AENA3/	Output	Amplifier -Enable 3	
42	AENA4/	Output	Amplifier -Enable 4	
43	FAULT3/	Input	Amplifier -Fault 3	6
44	FAULT4/	Input	Amplifier -Fault 4	6
45	ADCIN_1	Input	Analog Input 1	Option-12 required
46	ADCIN_2	Input	Analog Input 2	Option-12 required
47	FLT_FLG_V	Input	Amplifier Fault pull-up V+	
48	GND	Common	Digital Common	
49	+12V	Input	DAC Supply Voltage	7
50	-12V	Input	DAC Supply Voltage	7

The J3 connector is used to connect PMAC to the first 4 channels (Channels 1, 2, 3, and 4) of servo amps and encoders.

**Note 1:** These lines can be used as +5V power supply inputs to power PMAC's digital circuitry.

**Note 2:** Referenced to digital common (GND). Maximum of  $\pm 12V$  permitted between this signal and its complement.

**Note 3:** Leave this input floating if not used (i.e. digital single-ended encoders).

**Note 4:**  $\pm 10V$ , 10 mA max, referenced to common ground (GND).


**Note 5:** Leave floating if not used. Do not tie to GND.

**Note 6:** Functional polarity controlled by variable Ixx24. Must be conducting to 0V (usually GND) to produce a 0 in PMAC software. Automatic fault function can be disabled with Ixx24.

**Note 7:** Can be used to provide input power when the TB1 connector is not being used.

## J4 (JMACH2): Machine Port CPU Connector

(34-Pin Header)





Pin#	Symbol	Function	Description	Notes
1	FLG 1 2 V	Input	Flags 1-2 Pull-Up	
2	FLG 3 4 V	Input	Flags 3-4 Pull-Up	
3	GND	Common	Digital Common	
4	GND	Common	Digital Common	
5	HOME1	Input	Home-Flag 1	10
6	HOME2	Input	Home-Flag 2	10
7	PLIM1	Input	Positive End Limit 1	8,9
8	PLIM2	Input	Positive End Limit 2	8,9
9	MLIM1	Input	Negative End Limit 1	8,9
10	MLIM2	Input	Negative End Limit 2	8,9
11	USER1	Input	User Flag 1	
12	USER2	Input	User Flag 2	
13	PUL 1	Output	Pulse Output 1	
14	PUL 2	Output	Pulse Output 2	
15	DIR 1	Output	Direction Output 1	
16	DIR 2	Output	Direction Output 2	
17	EQU1	Output	Encoder Comp-Equal 1	
18	EQU2	Output	Encoder Comp-Equal 2	
19	HOME3	Input	Home-Flag 3	10
20	HOME4	Input	Home-Flag 4	10
21	PLIM3	Input	Positive End Limit 3	8,9
22	PLIM4	Input	Positive End Limit 4	8,9
23	MLIM3	Input	Negative End Limit 3	8,9
24	MLIM4	Input	Negative End Limit 4	8,9
25	USER1	Input	User Flag 1	
26	USER2	Input	User Flag 2	
27	PUL 3	Output	Pulse Output 3	
28	PUL 4	Output	Pulse Output 4	
29	DIR 3	Output	Direction Output 3	
30	DIR 4	Output	Direction Output 4	
31	EQU3	Output	Encoder Comp-Equal 3	
32	EQU4	Output	Encoder Comp-Equal 4	
33	B_WDO	Output	Watchdog Out	Indicator/driver
34	No Connect			

**Note 8:** Pins marked *PLIMn* should be connected to switches at the *positive* end of travel. Pins marked *MLIMn* should be connected to switches at the *negative* end of travel.

**Note 9:** Must be conducting to 0V (usually GND) for PMAC to consider itself not into this limit. Automatic limit function can be disabled with Ixx24.

**Note 10:** Functional polarity for homing or other trigger use of HOMEn controlled by Encoder/Flag Variable I70n2. HMFLn selected for trigger by Encoder/Flag Variable I70n3. Must be conducting to 0V (usually GND) to produce a 0 in PMAC software.
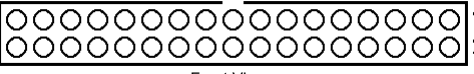
<b>J7 (JMACH3): Machine Port</b> (14-Pin Header)					33 34		1 2
Pin#	Symbol	Function	Description	Notes	Front View		
1	GND	Common	Digital Common				
2	GND	Common	Digital Common				
3	CHU1+	Input	U-Flag Channel 1				
4	CHU2+	Input	U-Flag Channel 2				
5	CHV1+	Input	V-Flag Channel 1				
6	CHV2+	Input	V-Flag Channel 2				
7	CHW1+	Input	W-Flag Channel 1				
8	CHW2+	Input	W-Flag Channel 2				
9	CHU3+	Input	U-Flag Channel 3				
10	CHU4+	Input	U-Flag Channel 4				
11	CHV3+	Input	V-Flag Channel 3				
12	CHV4+	Input	V-Flag Channel 4				
13	CHW3+	Input	W-Flag Channel 3				
14	CHW4+	Input	W-Flag Channel 4				
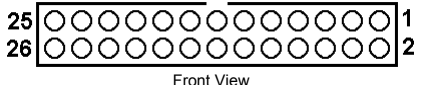
<b>J8 (JTHW): Multiplexer Port Connector</b> <b>(26-Pin Connector)</b>				
Pin#	Symbol	Function	Description	Notes
1	GND	Common	PMAC Common	
2	GND	Common	PMAC Common	
3	DAT0	Input	Data-0 Input	Data input from multiplexed accessory
4	SEL0	Output	Select-0 Output	Multiplexer select output
5	DAT1	Input	Data -1 Input	Data input from multiplexed accessory
6	SEL1	Output	Select -1 Output	Multiplexer select output
7	DAT2	Input	Data -2 Input	Data input from multiplexed accessory
8	SEL2	Output	Select -2 Output	Multiplexer select output
9	DAT3	Input	Data -3 Input	Data input from multiplexed accessory
10	SEL3	Output	Select -3 Output	Multiplexer select output
11	DAT4	Input	Data -4 Input	Data input from multiplexed accessory
12	SEL4	Output	Select -4 Output	Multiplexer select output
13	DAT5	Input	Data -5 Input	Data input from multiplexed accessory
14	SEL5	Output	Select -5 Output	Multiplexer select output
15	DAT6	Input	Data -6 Input	Data input from multiplexed accessory
16	SEL6	Output	Select -6 Output	Multiplexer select output
17	DAT7	Input	Data -7 Input	Data input from multiplexed accessory
18	SEL7	Output	Select -7 Output	Multiplexer select output
19	N.C.	N.C.	No Connection	
20	GND	Common	PMAC Common	
21	N.C.	N.C.	No Connection	
22	GND	Common	PMAC Common	
23	N.C.	N.C.	No Connection	
24	GND	Common	PMAC Common	
25	+5V	Output	+5VDC Supply	Power supply out
26	INIT-	Input	PMAC Reset	Low is Reset
<p>The JTHW multiplexer port provides 8 inputs and 8 outputs at TTL levels. While these I/O can be used in unmultiplexed form for 16 discrete I/O points, most users will utilize PMAC software and accessories to use this port in multiplexed form to greatly multiply the number of I/O that can be accessed on this port. In multiplexed form, some of the SELn outputs are used to select which of the multiplexed I/O are to be accessed.</p> <p>The direction of the input and output lines on this connector are set by jumpers E14 and E15. If E14 is removed or E15 is installed then the multiplexing feature of the JTHW port cannot be used.</p>				



<b>J9 (JOPT): I/O Port Connector</b> (34-Pin Connector)				<div> <div> <div>33</div> <div>34</div> </div> <div>1</div> <div>2</div> </div> <div>Front View</div>
Pin#	Symbol	Function	Description	Notes
1	MI8	Input	Machine Input 8	Direction selectable
2	GND	Common	PMAC Common	
3	MI7	Input	Machine Input 7	Direction selectable
4	GND	Common	PMAC Common	
5	MI6	Input	Machine Input 6	Direction selectable
6	GND	Common	PMAC Common	
7	MI5	Input	Machine Input 5	Direction selectable
8	GND	Common	PMAC Common	
9	MI4	Input	Machine Input 4	Direction selectable
10	GND	Common	PMAC Common	
11	MI3	Input	Machine Input 3	Direction selectable
12	GND	Common	PMAC Common	
13	MI2	Input	Machine Input 2	Direction selectable
14	GND	Common	PMAC Common	
15	MI1	Input	Machine Input 1	Direction selectable
16	GND	Common	PMAC Common	
17	MO8	Output	Machine Output 8	Direction selectable
18	GND	Common	PMAC Common	
19	MO7	Output	Machine Output 7	Direction selectable
20	GND	Common	PMAC Common	
21	MO6	Output	Machine Output 6	Direction selectable
22	GND	Common	PMAC Common	
23	MO5	Output	Machine Output 5	Direction selectable
24	GND	Common	PMAC Common	
25	MO4	Output	Machine Output 4	Direction selectable
26	GND	Common	PMAC Common	
27	MO3	Output	Machine Output 3	Direction selectable
28	GND	Common	PMAC Common	
29	MO2	Output	Machine Output 2	Direction selectable
30	GND	Common	PMAC Common	
31	MO1	Output	Machine Output 1	Direction selectable
32	GND	Common	PMAC Common	
33	+5	Output	+5 Power I/O	
34	GND	Common	PMAC Common	

This connector provides means for 16 general-purpose inputs or outputs at TTL levels. The direction of the input and output lines on this connector are set by jumpers E16 and E17. Further software settings are required to configure this port. See the Software Setup section for details.

---

44
Connector Pinouts

## J12 Ethernet Port (Optional)


Pin #	Function
1	TXD+
2	TXD-
3	RXD+
4	No Connect
5	No Connect
6	RXD-
7	No Connect
8	No Connect
9	No Connect
10	No Connect

The appropriate Category 5 10/100-Base T network cable that mates to this connector can be readily purchased from any local computer store. The type of network cable to purchase depends on the configuration to the host PC.

When making a direct connection to a Host communication Ethernet card in a PC, a Cat 5 networking crossover cable must be used. A standard Cat 5 straight-through networking cable cannot be used in this scenario. When using a connection to a network hub or switch, the standard Cat 5 straight-through networking cable must be used, and not a crossover cable.

## TB1 (JPWR): Power Supply

(4-Pin Terminal Block)

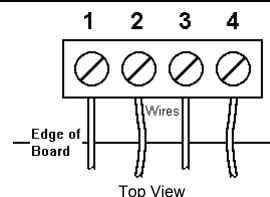

Pin#	Symbol	Function	Description	Notes
1	GND	Common	Digital Common	
2	+5V	Input	Logic Voltage	Supplies all PMAC digital circuits
3	+12V	Input	DAC Supply Voltage	Ref to Digital GND
4	-12V	Input	DAC Supply Voltage	Ref to Digital GND

This terminal block can be used to provide the input for the power supply for the circuits on the PMAC board when it is not in a bus configuration. When the PMAC is in a bus configuration, these supplies automatically come through the bus connector from the bus power supply; in this case, this terminal block should not be used.








## **SCHEMATICS**

---



THIS DOCUMENT IS THE CONFIDENTIAL PROPERTY OF DELTA TAU DATA SYSTEMS INC. AND IS LOANED SUBJECT TO RETURN UPON DEMAND. TITLE TO THIS DOCUMENT IS NEVER SOLD OR TRANSFERRED FOR ANY REASON. THIS DOCUMENT IS TO BE USED ONLY PURSUANT TO WRITTEN LICENSE OR WRITTEN INSTRUCTIONS OF DELTA TAU DATA SYSTEMS INC. ALL RIGHTS TO DESIGN AND INVENTIONS ARE RESERVED BY DELTA TAU DATA SYSTEMS INC. POSSESSION OF THIS DOCUMENT INDICATES ACCEPTANCE OF THE ABOVE AGREEMENT.

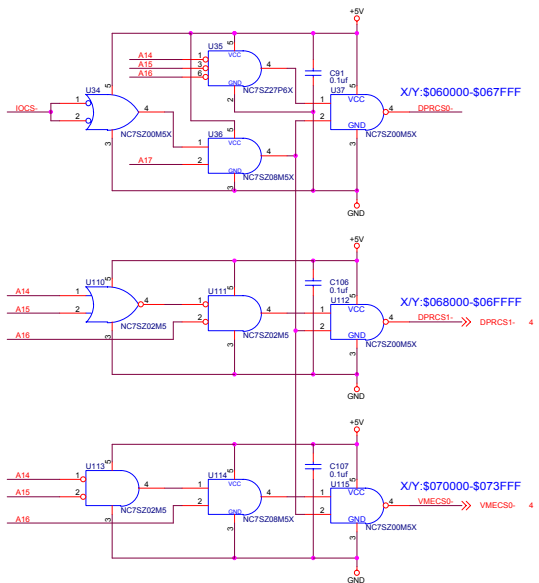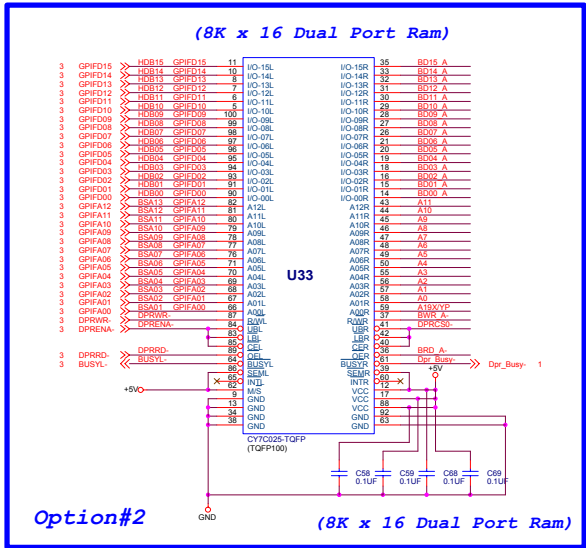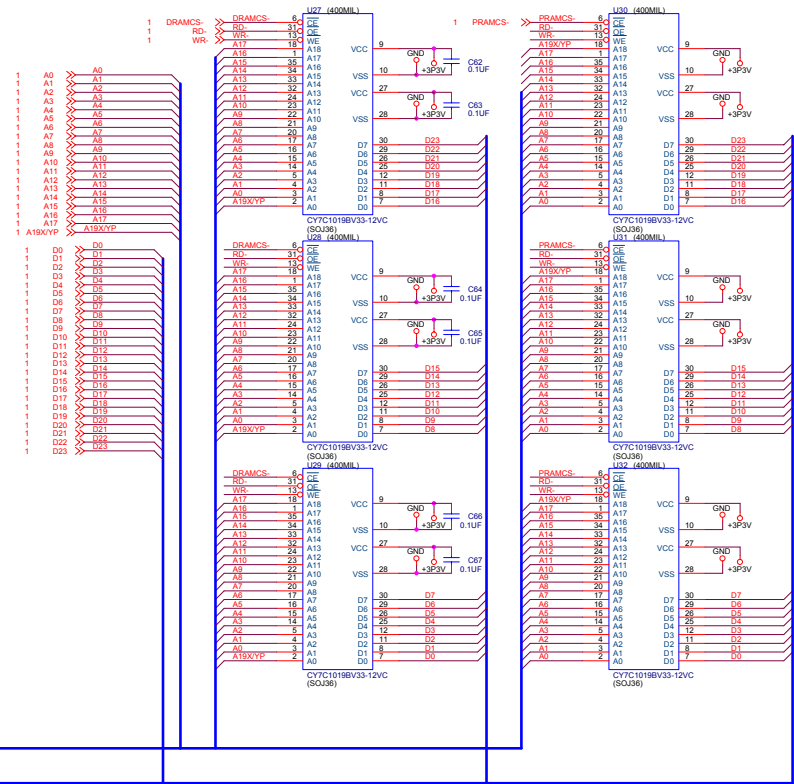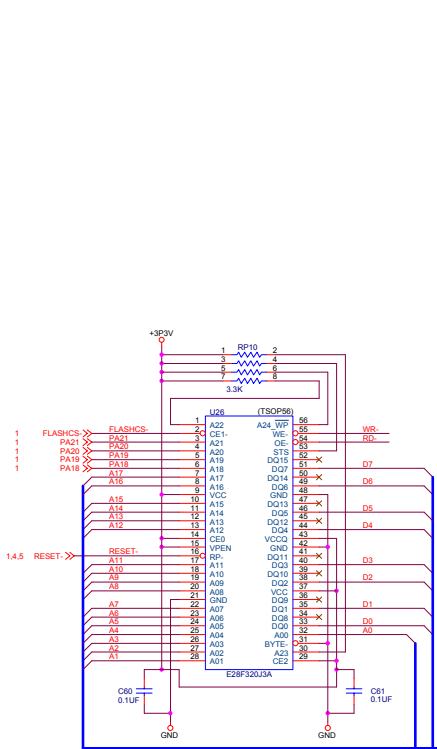
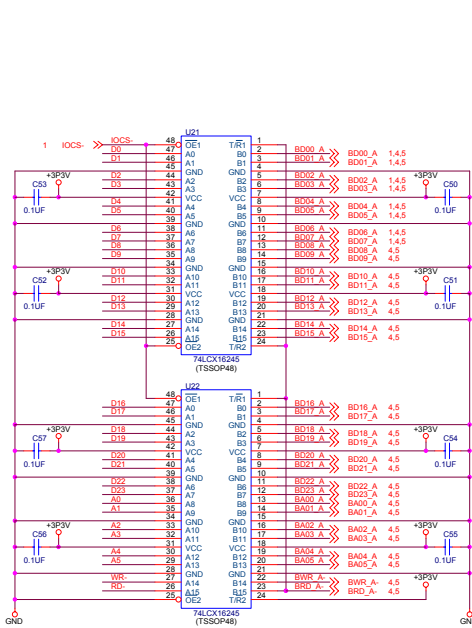


Memory Section


<b>DELTA TAU DATA SYSTEMS, INC</b>				
21314 Lassen St., Chatsworth CA. 91311				
www.deltatau.com				
<b>CLIPPER BD-TURBO PMAC2A-ETH</b>				
Size		DWG NO	Version	Rev
D		<b>400-603871-32</b>	<b>4</b>	<b>1</b>
Friday, March 28, 2008		Sheet 2 of 6		

Turbo PMAC2-Eth-Lite Hardware Reference Manual

THIS DOCUMENT IS THE CONFIDENTIAL PROPERTY OF DELTA TAU DATA SYSTEMS INC. AND IS LOANED SUBJECT TO RETURN UPON DEMAND. IT IS TO BE USED ONLY FOR THE PURPOSES OF THE PROJECT FOR WHICH IT WAS LOANED. IT IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM. DELTA TAU DATA SYSTEMS INC. ACCEPTS NO LIABILITY FOR ANY DAMAGE, INCLUDING CONSEQUENTIAL DAMAGES, ARISING FROM THE USE OF THIS DOCUMENT. DELTA TAU DATA SYSTEMS INC. ACCEPTS NO LIABILITY FOR ANY DAMAGE, INCLUDING CONSEQUENTIAL DAMAGES, ARISING FROM THE USE OF THIS DOCUMENT.

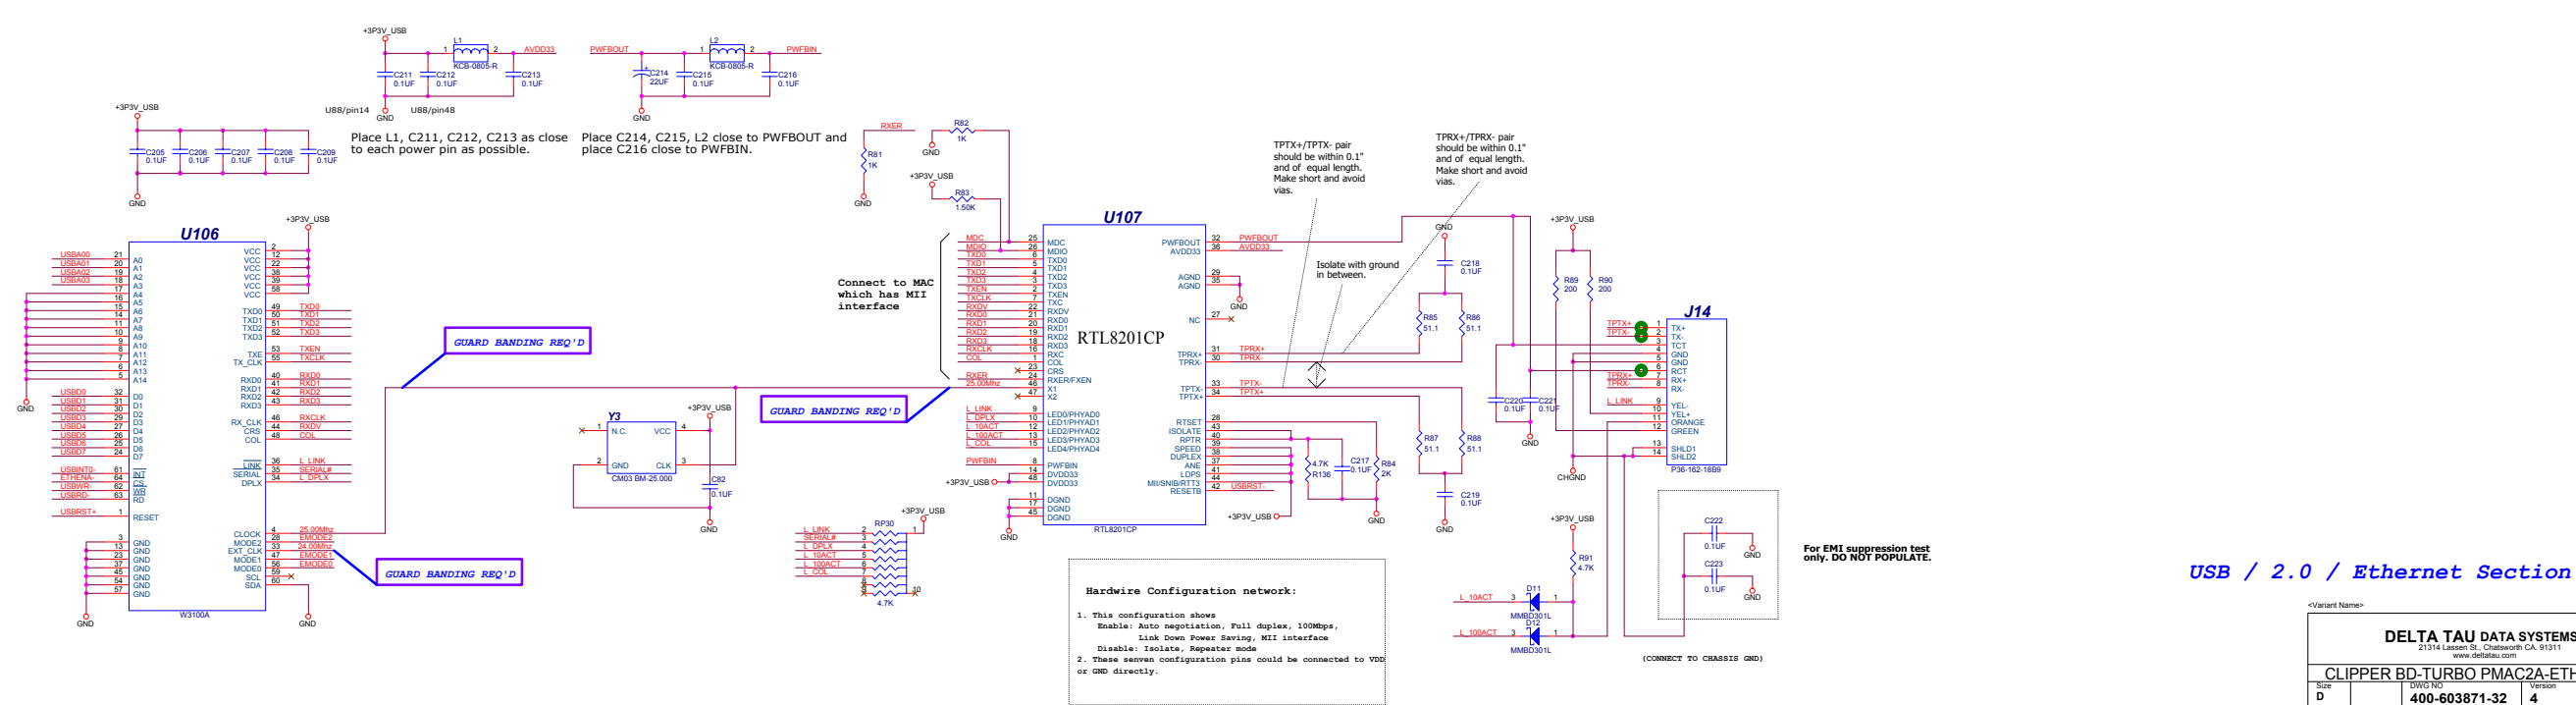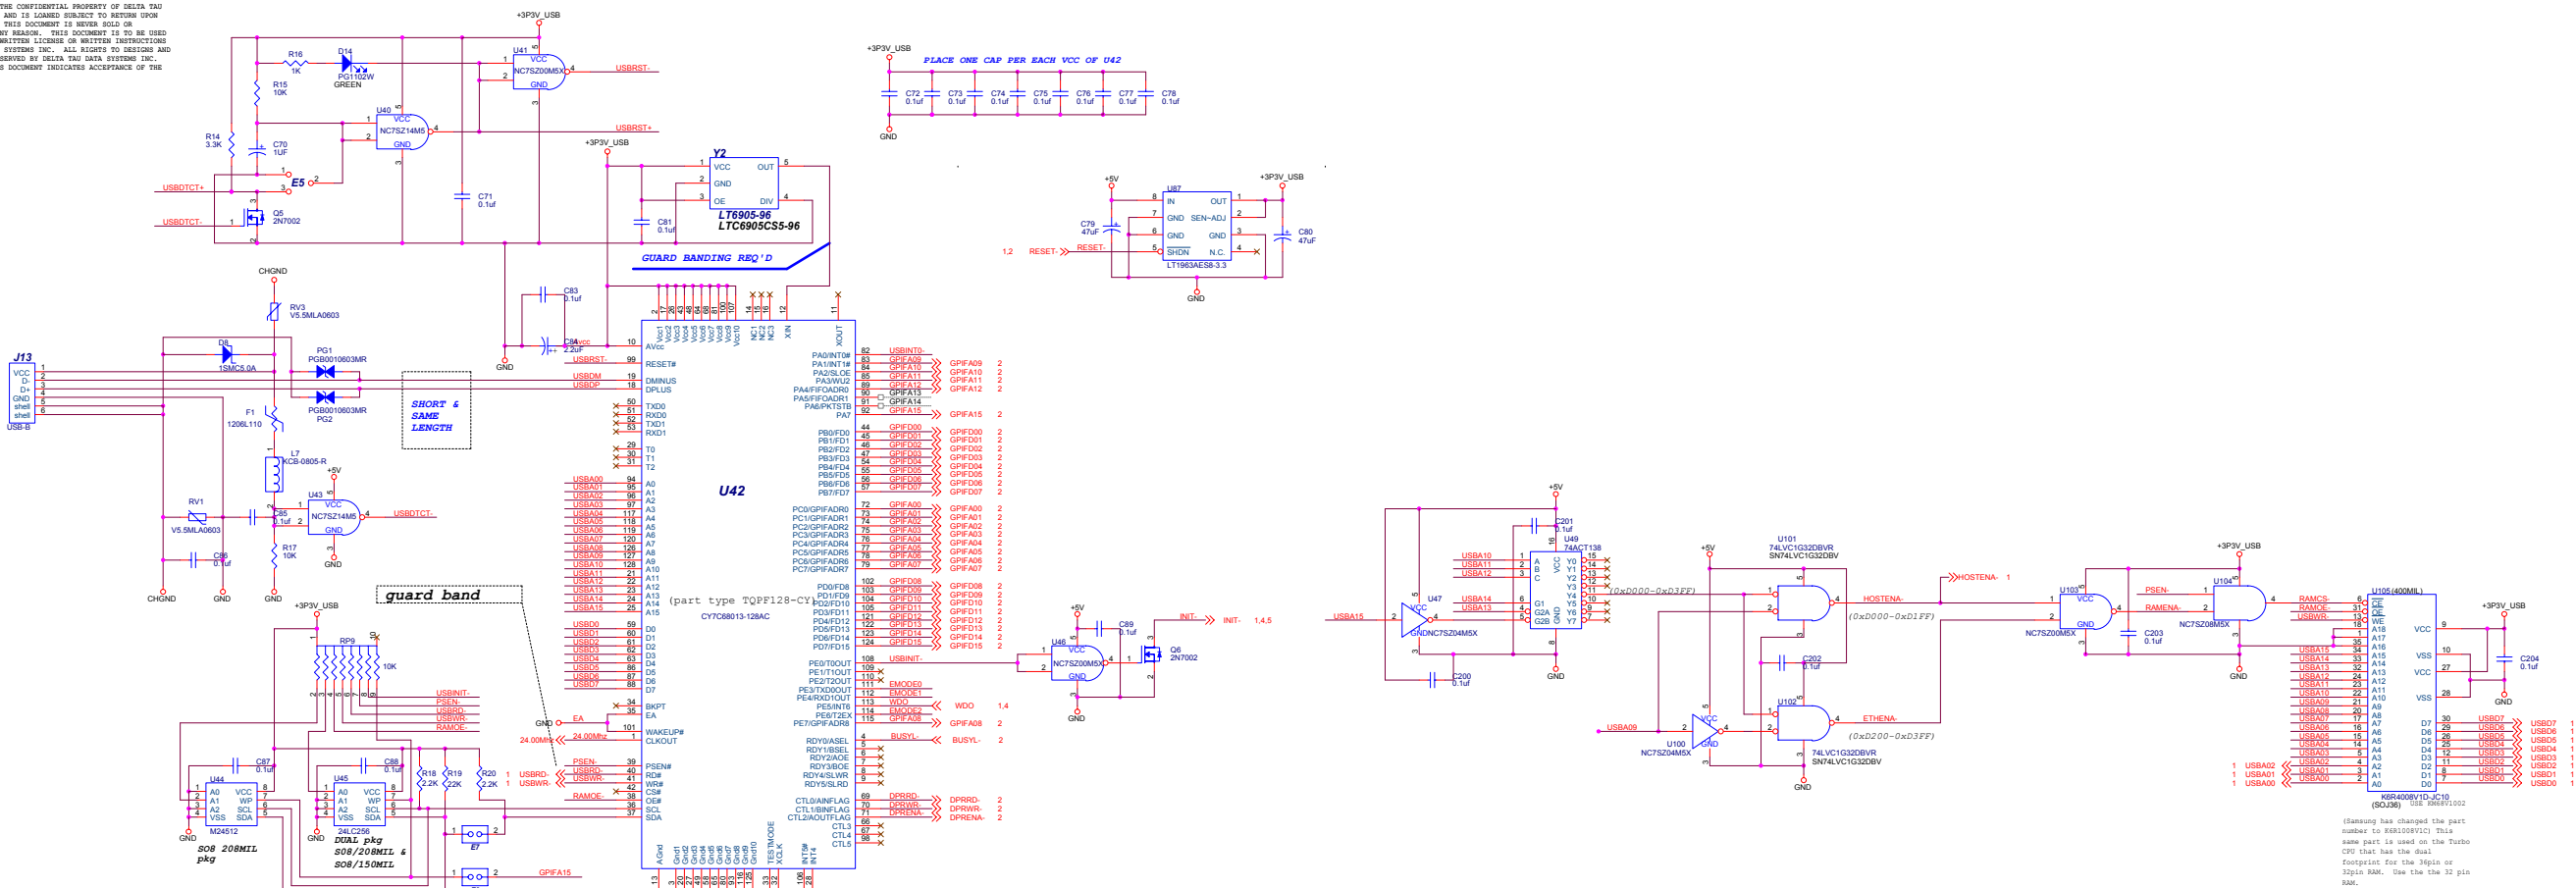



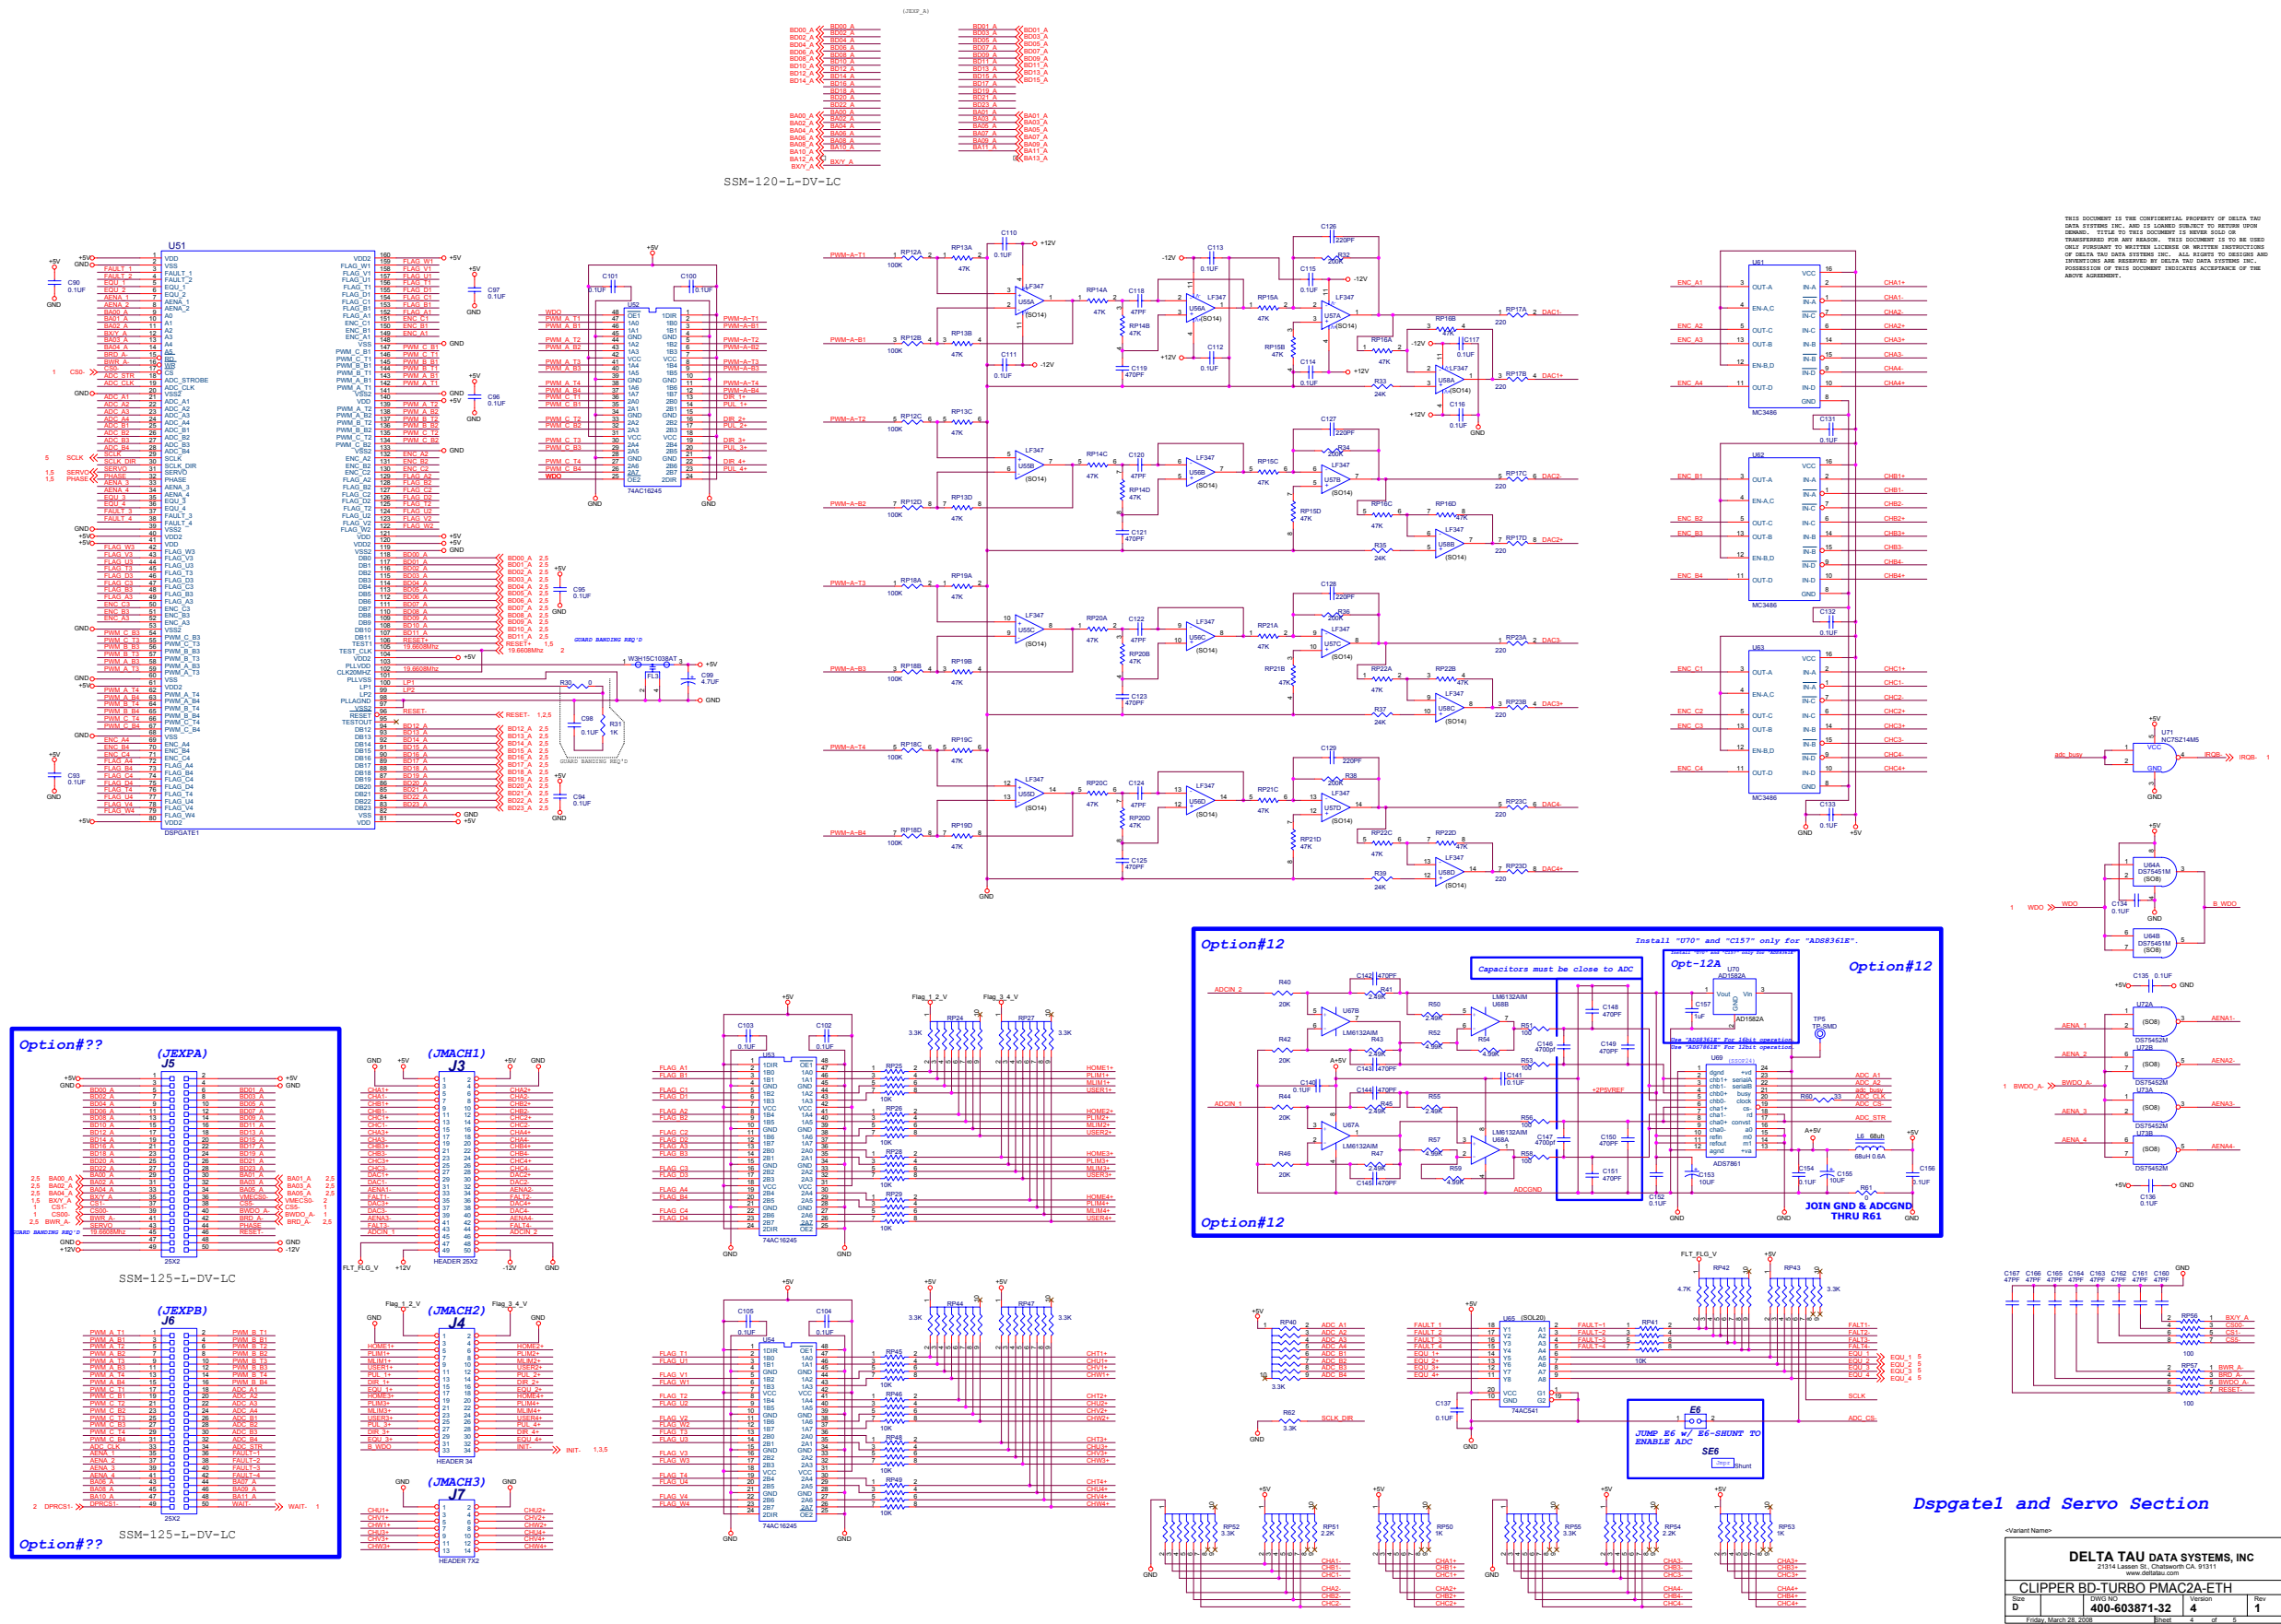

THIS DOCUMENT IS THE CONFIDENTIAL PROPERTY OF DELTA TAU DATA SYSTEMS INC. AND IS LOANED SUBJECT TO RETURN UPON DEMAND. TITLE TO THIS DOCUMENT IS NEVER SOLD OR TRANSFERRED FOR ANY REASON. THIS DOCUMENT IS TO BE USED ONLY PURSUANT TO WRITTEN LICENSE OR WRITTEN INSTRUCTIONS OF DELTA TAU DATA SYSTEMS INC. ALL RIGHTS TO DESIGNS AND INVENTIONS ARE RESERVED BY DELTA TAU DATA SYSTEMS INC. POSSESSION OF THIS DOCUMENT INDICATES ACCEPTANCE OF THE ABOVE AGREEMENT.

